


# 1988 Eliminator PARTS DIAGRAM

Valve(s)

11210-0012

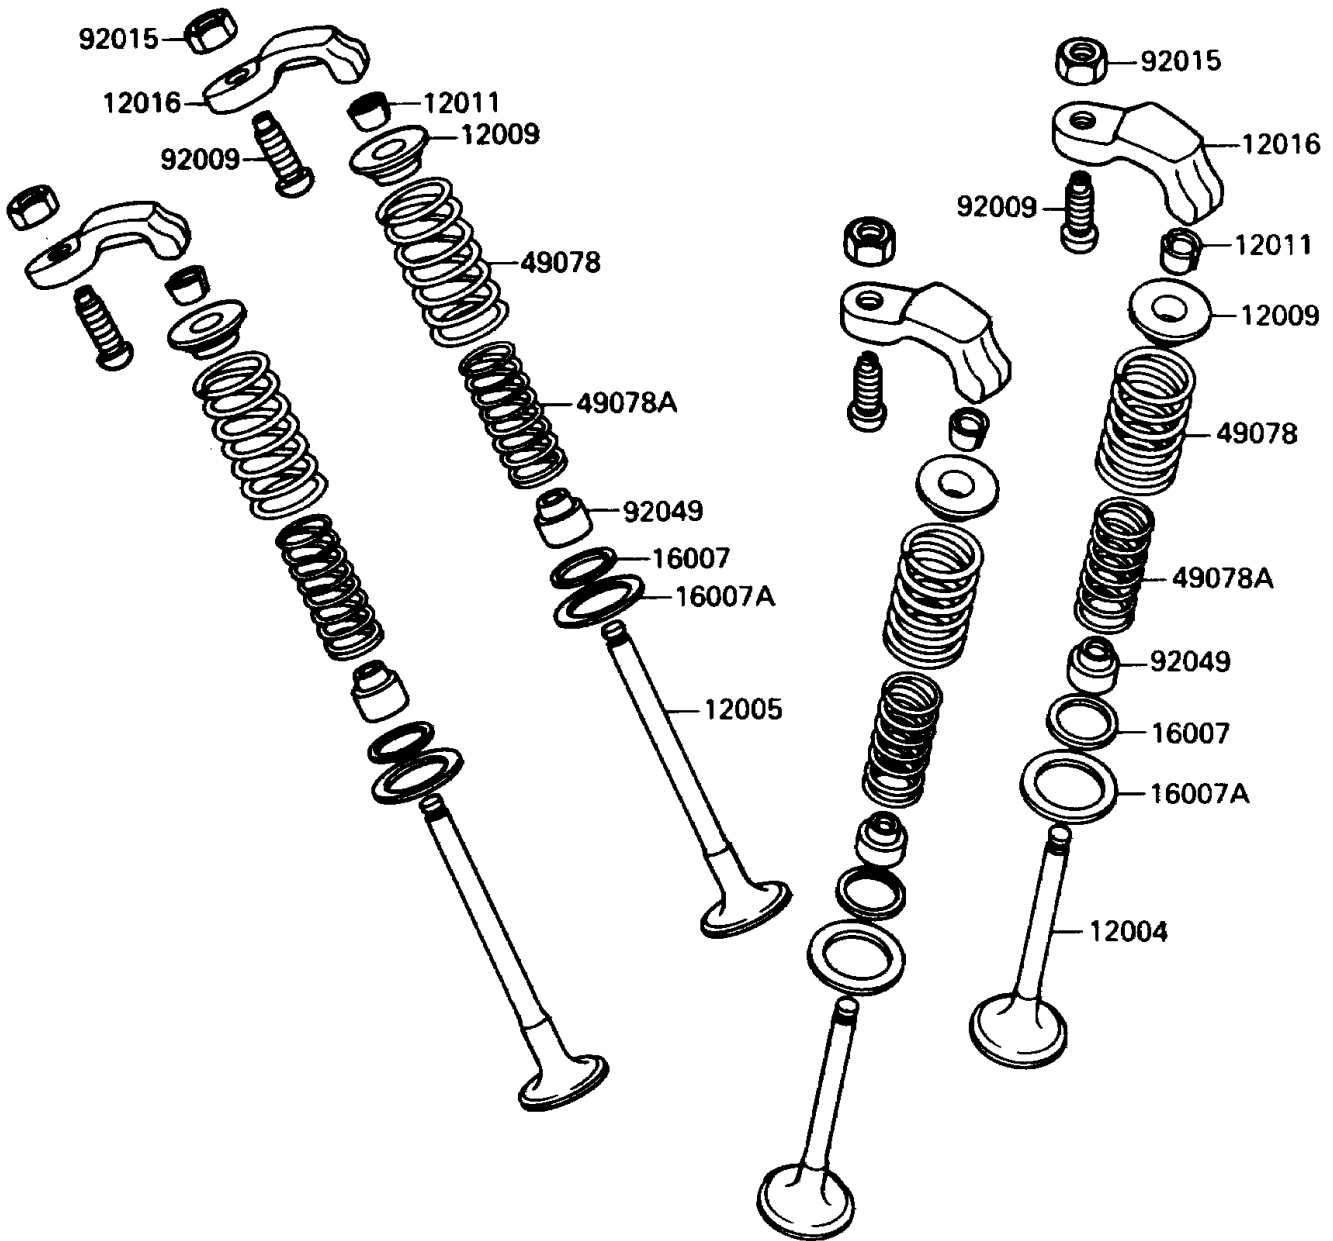

## 1988 Eliminator PARTS LIST

Valve(s)

ITEM NAME	PART NUMBER	QUANTITY
VALVE-INTAKE (Ref # 12004)	12004-1074	4
VALVE-EXHAUST (Ref # 12005)	12005-1091	4
RETAINER-VALVE SPRING (Ref # 12009)	12009-1060	8
COLLET (Ref # 12011)	12011-1051	16
ARM-ROCKER (Ref # 12016)	12016-1067	8
SEAT-SPRING,12.1X16.2X0.5 (Ref # 16007)	16007-1143	8
SEAT-SPRING,17.5X23.8X0.5 (Ref # 16007A)	16007-1144	8
SPRING-ENGINE VALVE (Ref # 49078)	49078-1078	8
SPRING-ENGINE VALVE (Ref # 49078A)	49078-1079	8
SCREW,6MM (Ref # 92009)	92009-1424	8
NUT,6MM (Ref # 92015)	92015-1586	8
SEAL-OIL,VSB58.558 (Ref # 92049)	92049-1218	8