


# 1972 F9 PARTS DIAGRAM

FRONT HUB/BRAKE ('74-'75 F9-B/F9-C 350)

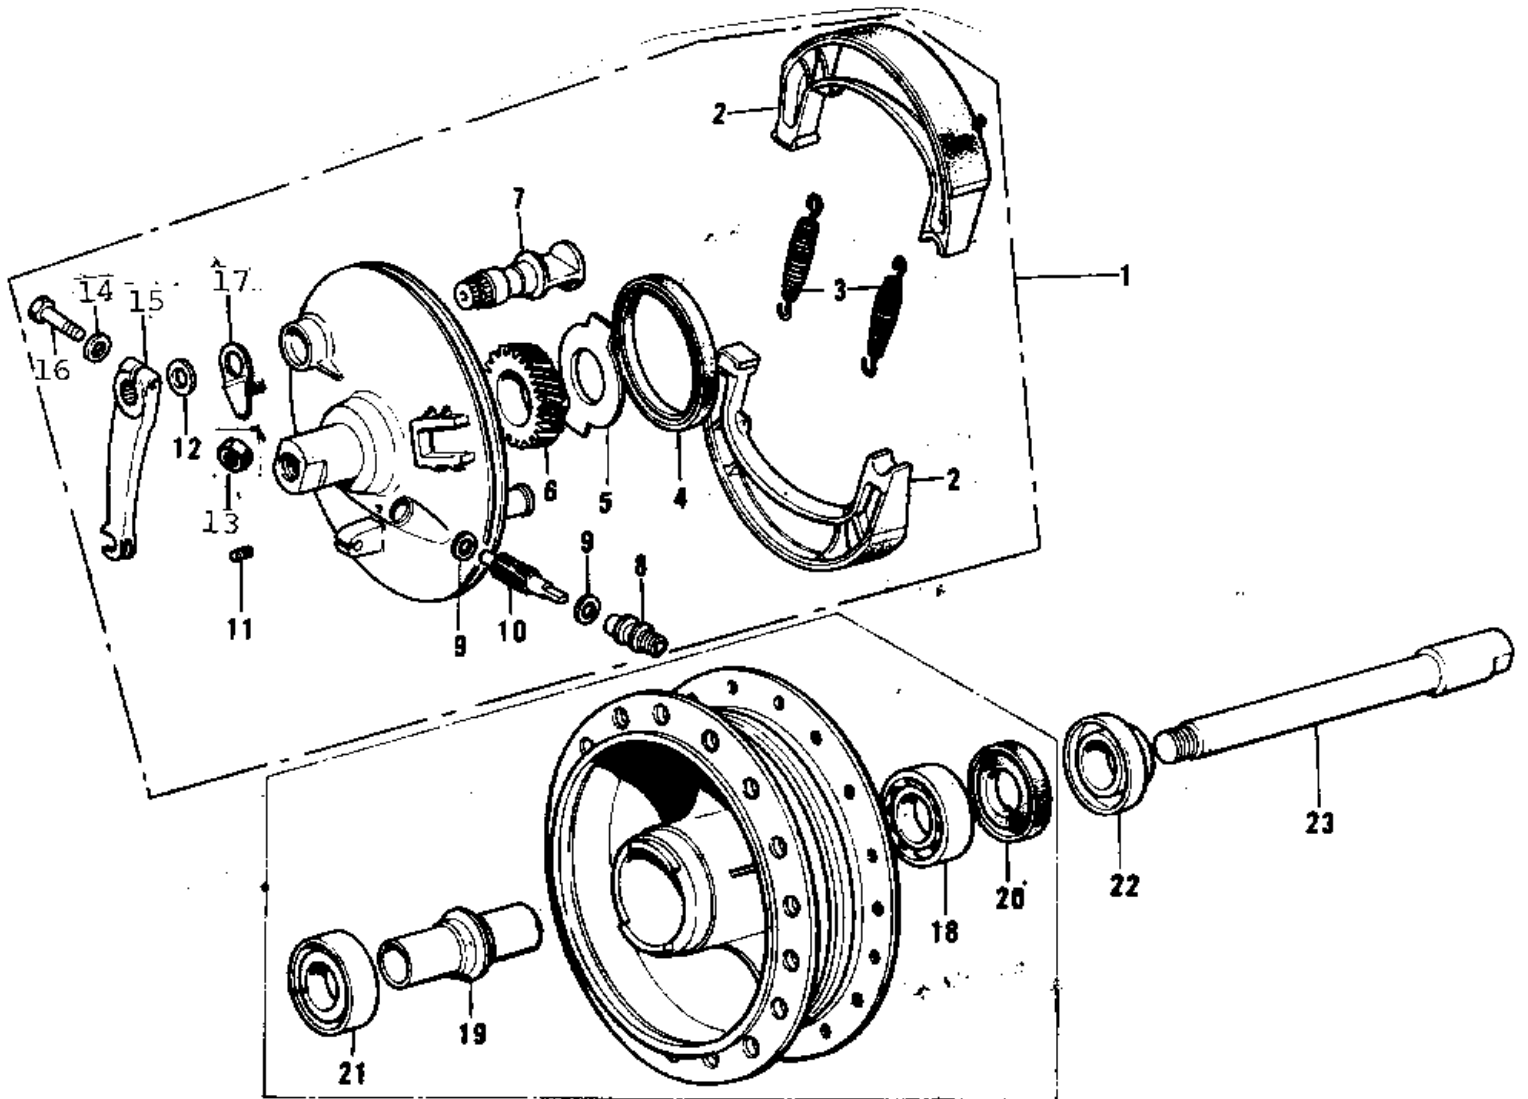

# 1972 F9 PARTS LIST

FRONT HUB/BRAKE ('74-'75 F9-B/F9-C 350)

ITEM NAME	PART NUMBER	QUANTITY
PANEL-ASY,FR BRK BUF (Ref # 1~16)	41035-045-80	1
SHOE,BRAKE (Ref # 2)	42019-011	2
SHOE,BRAKE (Ref # 2)	42019-011	2
SPRING-BRAKE SHOE (Ref # 3)	42020-004	2
OIL SEAL F BRK PANEL (Ref # 4)	92050-010	1
RECIEVER GEAR (Ref # 5)	41064-003	1
GEAR-SPEEDOMETER (Ref # 6)	41059-011	1
CAM SHAFT,REAR BRAKE (Ref # 7)	42026-021	1
CAM SHAFT,FRONT BRAK (Ref # 7)	41050-015	1
BUSH SPEEDMETER CABL (Ref # 8)	41062-001	1
BUSH,SPEEDMETER CABL (Ref # 8)	41062-005	1
WASHER THRST SPD PIN (Ref # 9)	41063-001	2
PINION-SPEEDOMETER (Ref # 10)	41060-010	1
SCREW-BUSHING NET (Ref # 11)	41070-004	1
PIN,SPRING (Ref # 11)	41082-001	1
DUST SHIELD BRAKE CA (Ref # 12)	41051-001	1
NUT 6MM (Ref # 13)	311B0600	1
WASHER PLAIN 6MM (Ref # 14)	410B0600	1
LEVER,REAR BRAKE CAM (Ref # 15)	42029-037	1
LEVER-BRAKE CAM (Ref # 15)	41053-017	1
BOLT 6X35 (Ref # 16)	110R0635	1
BOLT-UPSET,6X35 (Ref # 16)	112G0635	AL
BOLT-UPSET (Ref # 16)	112G0625	1
INDICATOR,FR BRK PNL (Ref # 17)	41085-005	1
DRUM-ASSY,FR BRK (Ref # 18~21)	41034-022	1
DRUM-ASSY,FR BRK,BUF (Ref # 18~21)	41034-023-80	1
BEARING BALL #6202Z (Ref # 18)	601B6202Z	1
SPACER FR HUB BEARIN (Ref # 19)	41039-004	1
SPACER-FRONT HUB BER (Ref # 19)	41039-020	1

## 1972 F9 PARTS LIST

FRONT HUB/BRAKE ('74-'75 F9-B/F9-C 350)

ITEM NAME	PART NUMBER	QUANTITY
BEARING BALL #6202 (Ref # 20)	601B6202	1
OIL SEAL RR BRK DRUM (Ref # 21)	92050-008	1
COLLAR FRONT HUB R.H (Ref # 22)	41069-004	1
COLLAR-FRONT AXLE (Ref # 22)	41069-019	1
AXLE-FRONT (Ref # 23)	41068-029	1
AXLE-FRONT (Ref # 23)	41068-037	1
TORQUE LINK-FRNT BRK (Ref # 24)	43007-022	1
WASHER-LOCK (Ref # 25)	92088-012	2
BOLT-HEA HEAD,8X20 (Ref # 26)	92001-086	2