


# 1986 KLT110 PARTS DIAGRAM

## RECOIL STARTER

E3040-0001

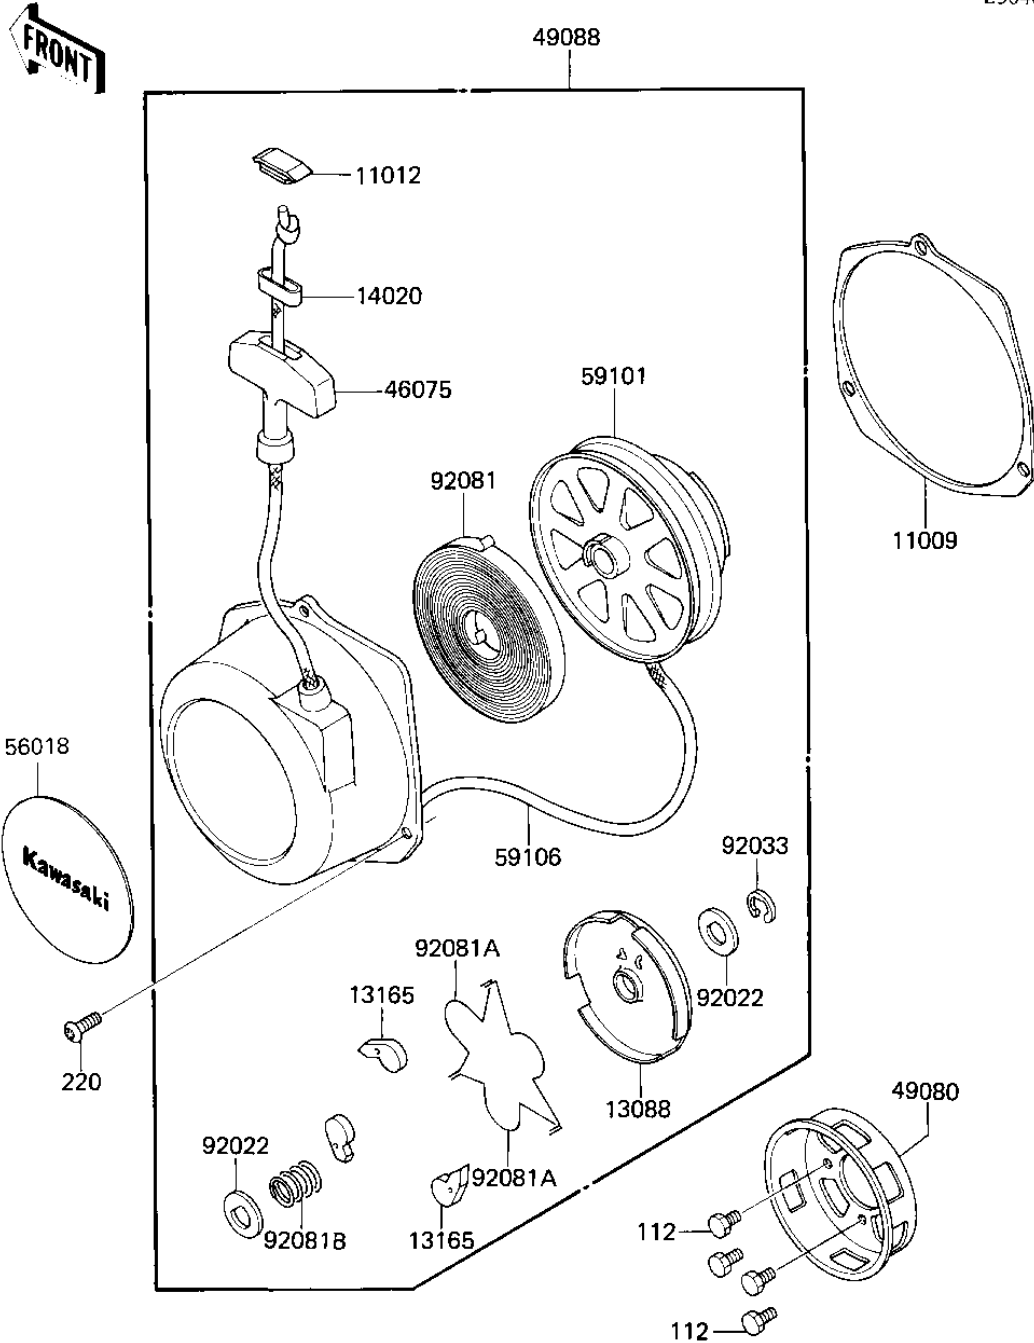

# 1986 KLT110 PARTS LIST

## RECOIL STARTER

ITEM NAME	PART NUMBER	QUANTITY
GASKET,RECOIL STARTER (Ref # 11009)	11009-1312	1
CAP,RECOIL GRIP (Ref # 11012)	11012-1374	1
PLATE-FRICTION,RECOIL (Ref # 13088)	13088-1053	1
PAWL-RECOIL (Ref # 13165)	13069-504	3
RETAINER,ROPE (Ref # 14020)	23072-508	1
GRIP,RECOIL (Ref # 46075)	46075-1052	1
PULLEY-STARTING (Ref # 49080)	49080-1001	1
STARTER-RECOIL (Ref # 49088)	49088-1001	1
MARK,RECOIL STARTER (Ref # 56018)	56018-1436	1
REEL (Ref # 59101)	59101-1101	1
ROPE,RECOIL (Ref # 59106)	59106-1109	1
WASHER,RECOIL (Ref # 92022)	92022-1498	2
RING-SNAP (Ref # 92033)	92033-1157	1
SPRING,SPIRAL (Ref # 92081)	92081-1646	1
SPRING-PAWL (Ref # 92081A)	92081-503	3
SPRING,FRICTION (Ref # 92081B)	92081-507	1
BOLT,6X10 (Ref # 112)	112G0610	4
SCREW PAN HEAD 6X16 (Ref # 220)	220B0616	3