



# 1980 KLX250 PARTS LIST

## KICKSTARTER MECHANISM

ITEM NAME	PART NUMBER	QUANTITY
PEDAL ASSY,KICK (Ref # 1)	13064-1004	
PEDAL ASSY,KICK (Ref # 1-1)	13064-1027	
BOSS,KICKSTARTER (Ref # 2)	13061-1007	
BOSS,KICK PEDAL (Ref # 2-1)	13061-5001	
SCREW,8X8 (Ref # 3)	290Q0808	
CIR CLIP (Ref # 4)	482K0100	
BOOT,KICKSTARTER (Ref # 5)	49006-1006	
BALL STEEL 1/4' (Ref # 6)	600A0800	
"O" RING,15MM (Ref # 7)	670B2015	
"O" RING,12MM (Ref # 7-1)	670B2012	
BOLT,HEX HEAD,8X28 (Ref # 8)	92001-1042	
BOLT-SMALL-UPSET 8X25 (Ref # 8-1)	115G0825	
WASHER,PLAIN (Ref # 9)	92022-1019	
SPRING KICK PEDAL (Ref # 10)	92081-020	
IDLE GEAR,KICKSTARTER (Ref # 11)	13073-013	
PINION,KICKSTARTER (Ref # 12)	13075-012	
SHAFT,KICKSTARTER (Ref # 13)	13066-044	
GEAR-COMP,KICKSTARTER (Ref # 14)	13216-1099	
RATCHET,KL250-D2 (Ref # 15)	13078-1052	
CIRCLIP 16MM (Ref # 16)	480J1600	
WASHER,PLAIN (Ref # 17)	92022-315	
SPRING,RATCHET (Ref # 18)	92081-122	
GUID,KICKSTARTER SPRG (Ref # 19)	13070-011	
SPRING-KICKSTARTER (Ref # 20)	92082-003	
BOLT-UPSET (Ref # 21)	112G0618	
STOPPER,KICKSTARTER (Ref # 22)	13072-017	
GUIDE,KICK RATCHET (Ref # 23)	13206-1004	
WASHER THRUST (Ref # 24)	92022-118	
WASHER,PLAIN (Ref # 25)	92022-269	