


2008 Ninja® ZX™-6R PARTS DIAGRAM

Top Feed Injector

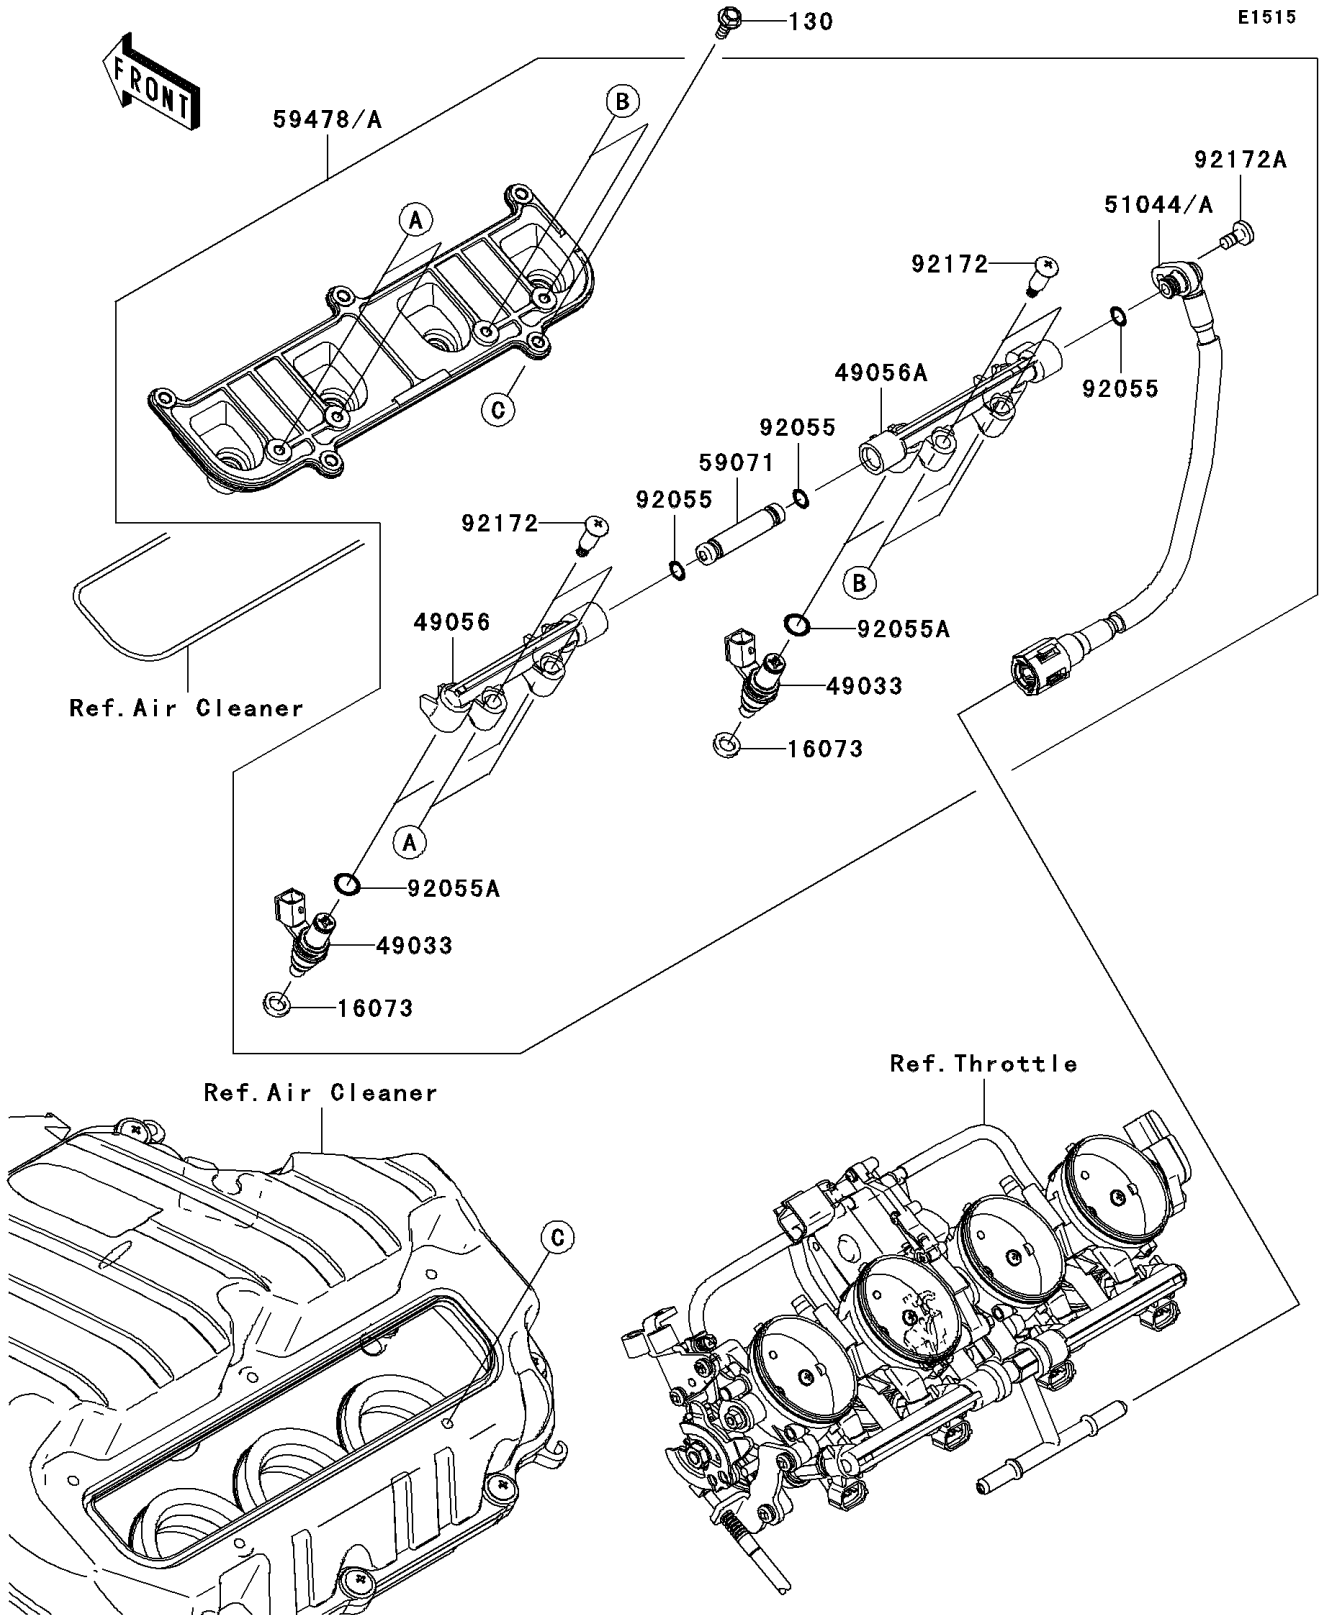

2008 Ninja® ZX™ -6R PARTS LIST

Top Feed Injector

| ITEM NAME | PART NUMBER | QUANTITY |
|--|-------------|----------|
| BOLT-FLANGED,5X14 (Ref # 130) | 130BB0514 | 5 |
| INSULATOR (Ref # 16073) | 16073-0077 | 4 |
| NOZZLE-INJECTION (Ref # 49033) | 49033-0015 | 4 |
| PIPE-INJECTION,LH (Ref # 49056) | 49056-0015 | 1 |
| PIPE-INJECTION,RH (Ref # 49056A) | 49056-0016 | 1 |
| TUBE-ASSY,FUEL (Ref # 51044A) | 51044-0043 | 1 |
| JOINT (Ref # 59071) | 59071-0034 | 1 |
| NOZZLE-ASSY, TOP INJECTOR (Ref # 59478A) | 59478-0005 | 1 |
| RING-O (Ref # 92055) | 92055-0064 | 3 |
| RING-O (Ref # 92055A) | 92055-0170 | 4 |
| SCREW,PIPE INJECTION (Ref # 92172) | 92172-0064 | 4 |
| SCREW,TORX (Ref # 92172A) | 92172-0272 | 1 |