


# 2005 KFX80 PARTS DIAGRAM

Front Hub

F2230

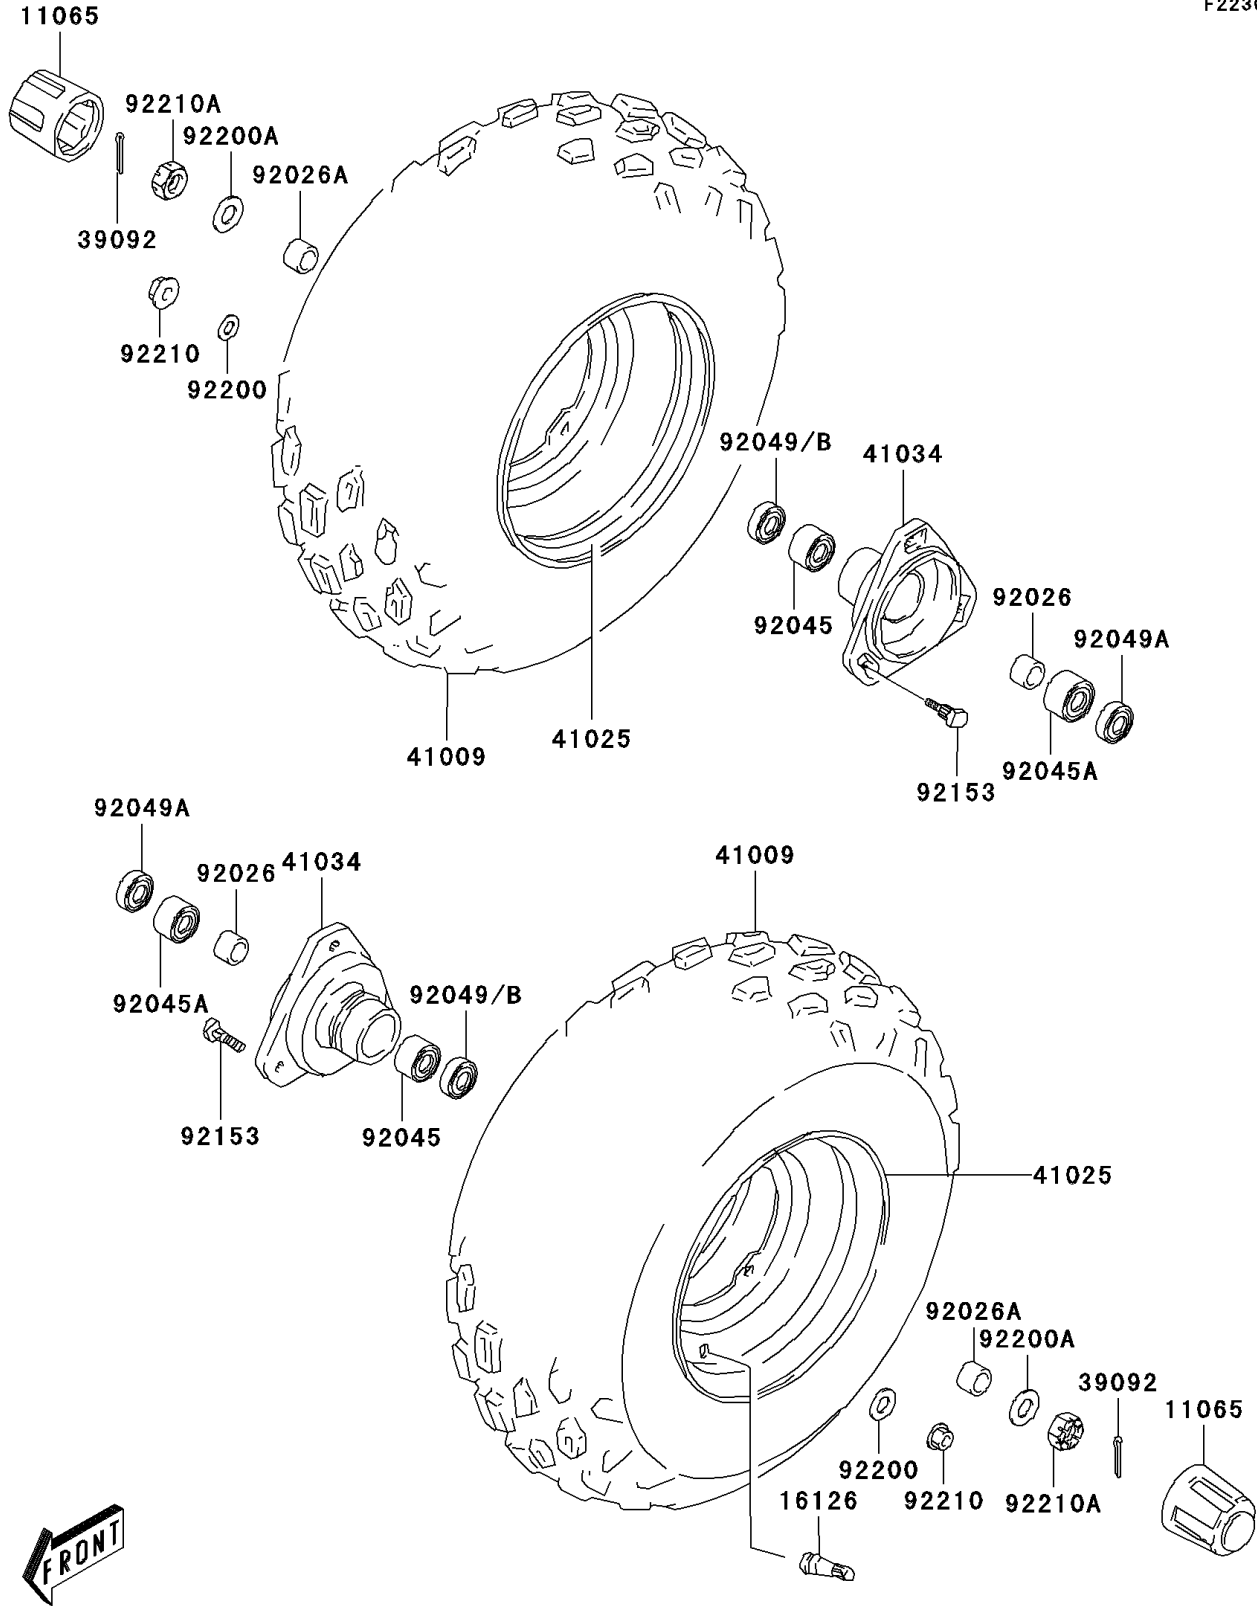

## 2005 KFX80 PARTS LIST

### Front Hub

ITEM NAME	PART NUMBER	QUANTITY
CAP,WHEEL (Ref # 11065)	11065-S022	2
VALVE,WHEEL RIM (Ref # 16126)	16126-S008	2
PIN-HAIR (Ref # 39092)	39092-S007	2
TIRE,AT19X7-8(DUNLOP) (Ref # 41009)	41009-S010	2
RIM,FRONT WHEEL,B.SILVER (Ref # 41025)	41025-S007-530	2
DRUM-ASSY,FR (Ref # 41034)	41034-S004	2
SPACER,FRONT HUB BEARING (Ref # 92026)	92026-S061	2
SPACER,FRONT AXLE (Ref # 92026A)	92026-S062	2
BEARING-BALL,FRONT HUB (Ref # 92045)	92045-S036	2
BEARING-BALL,FRONT HUB (Ref # 92045A)	92045-S037	2
SEAL-OIL,FRONT HUB (Ref # 92049A)	92049-S032	2
SEAL-OIL,FRONT HUB BRG (Ref # 92049B)	92049-S063	2
BOLT,FRONT HUB (Ref # 92153)	92153-S230	6
WASHER,MAGNETO (Ref # 92200)	92200-S092	6
WASHER,FRONT AXLE (Ref # 92200A)	92200-S099	2
NUT (Ref # 92210)	92210-S005	6
NUT,FRONT AXLE (Ref # 92210A)	92210-S075	2