


# 2006 Vulcan 1600 Nomad PARTS DIAGRAM

Valve(s)

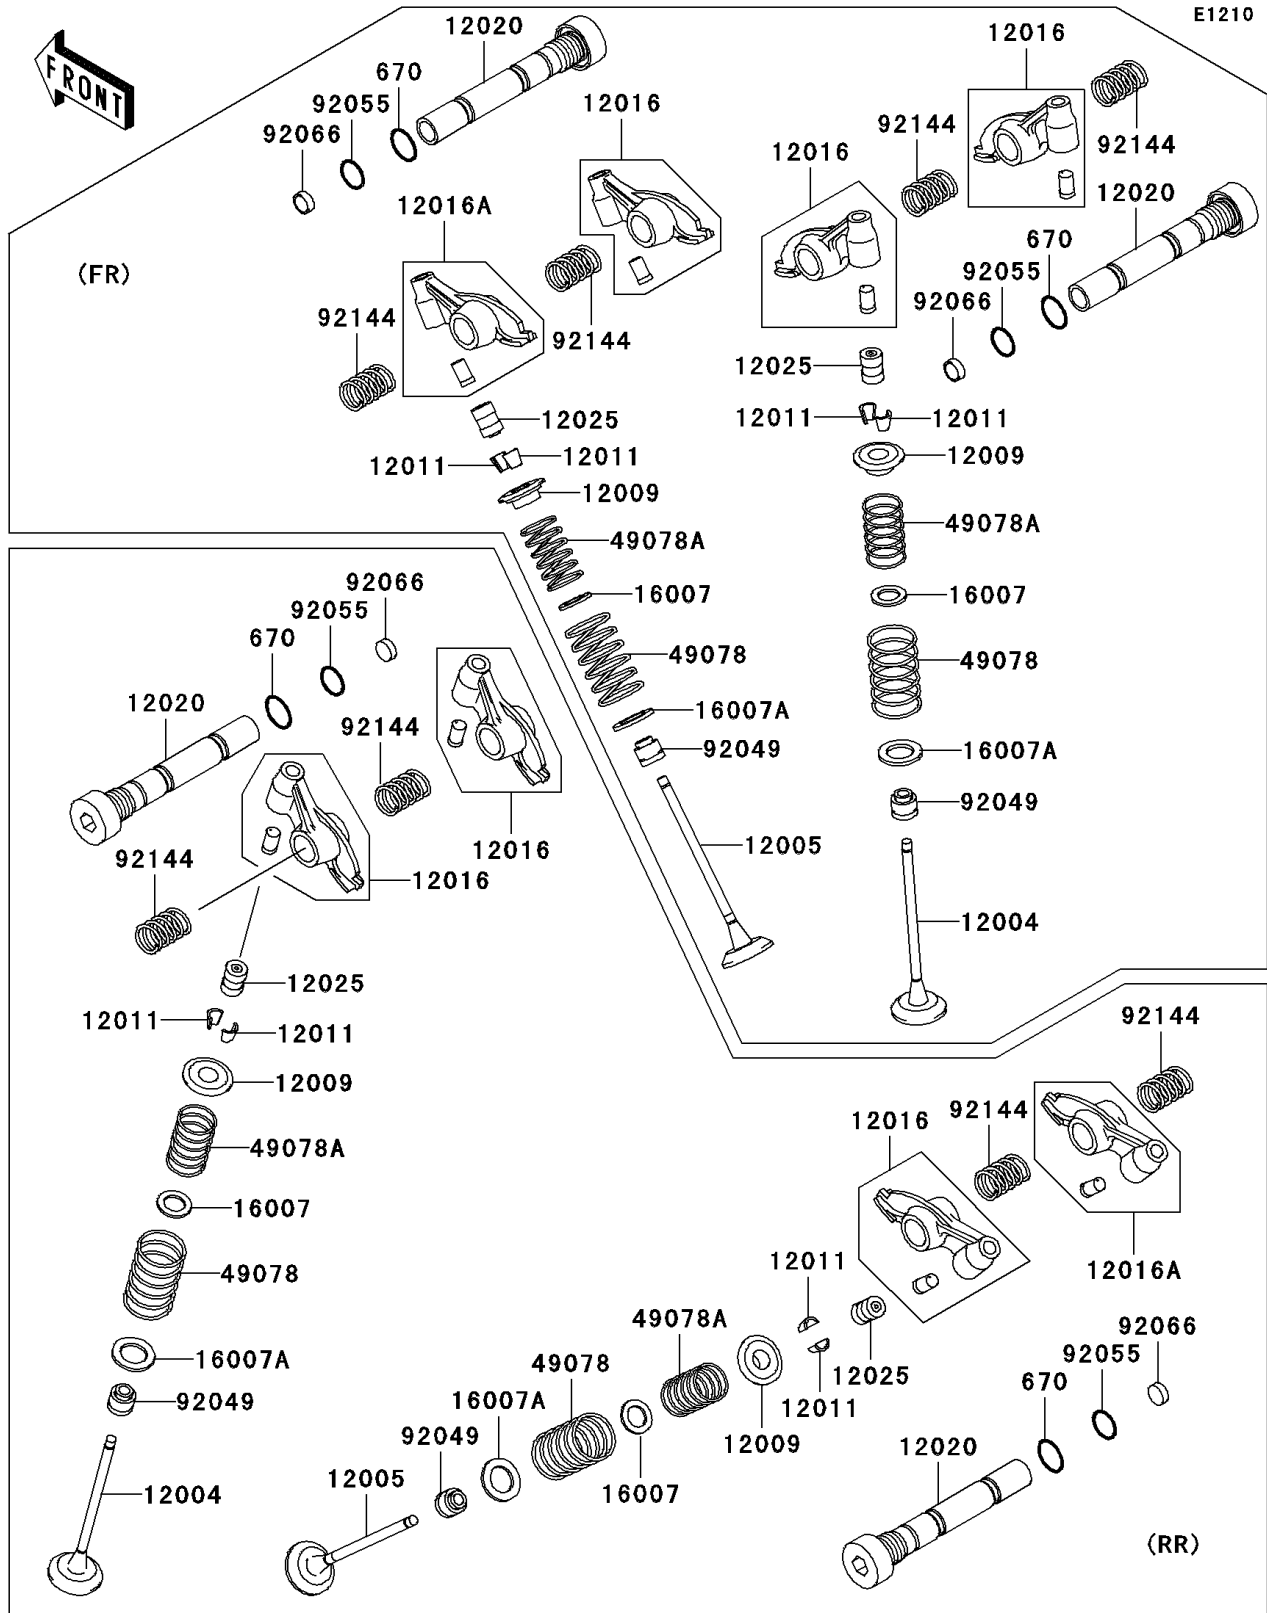

## 2006 Vulcan 1600 Nomad PARTS LIST

Valve(s)

| ITEM NAME                                | PART NUMBER | QUANTITY |
|--|-------------|----------|
| O RING,20MM (Ref # 670)                  | 670B2020    | 4        |
| VALVE-INTAKE (Ref # 12004)               | 12004-1072  | 4        |
| VALVE-EXHAUST (Ref # 12005)              | 12005-1268  | 4        |
| RETAINER-VALVE SPRING (Ref # 12009)      | 12009-005   | 8        |
| COLLET,RETAINER (Ref # 12011)            | 12011-004   | 16       |
| ARM-ROCKER (Ref # 12016)                 | 12016-1112  | 6        |
| ARM-ROCKER (Ref # 12016A)                | 12016-1113  | 2        |
| SHAFT-ROCKER (Ref # 12020)               | 12020-1061  | 4        |
| ADJUSTER-LASH (Ref # 12025)              | 12025-1053  | 8        |
| SEAT-SPRING,12X20X0.5 (Ref # 16007)      | 16007-1031  | 8        |
| SEAT-SPRING,21X29.5X0.5 (Ref # 16007A)   | 16007-1137  | 8        |
| SPRING-ENGINE VALVE,OUTER (Ref # 49078)  | 49078-1157  | 8        |
| SPRING-ENGINE VALVE,INNER (Ref # 49078A) | 49078-1158  | 8        |
| SEAL-OIL,RV37129.5 (Ref # 92049)         | 92049-016   | 8        |
| RING-O,12X1.5 (Ref # 92055)              | 92055-025   | 4        |
| PLUG (Ref # 92066)                       | 92066-1198  | 4        |
| SPRING,ROCKER ARM (Ref # 92144)          | 92144-1221  | 8        |