


# 2008 Vulcan® 1600 Nomad™ PARTS DIAGRAM

Valve(s)

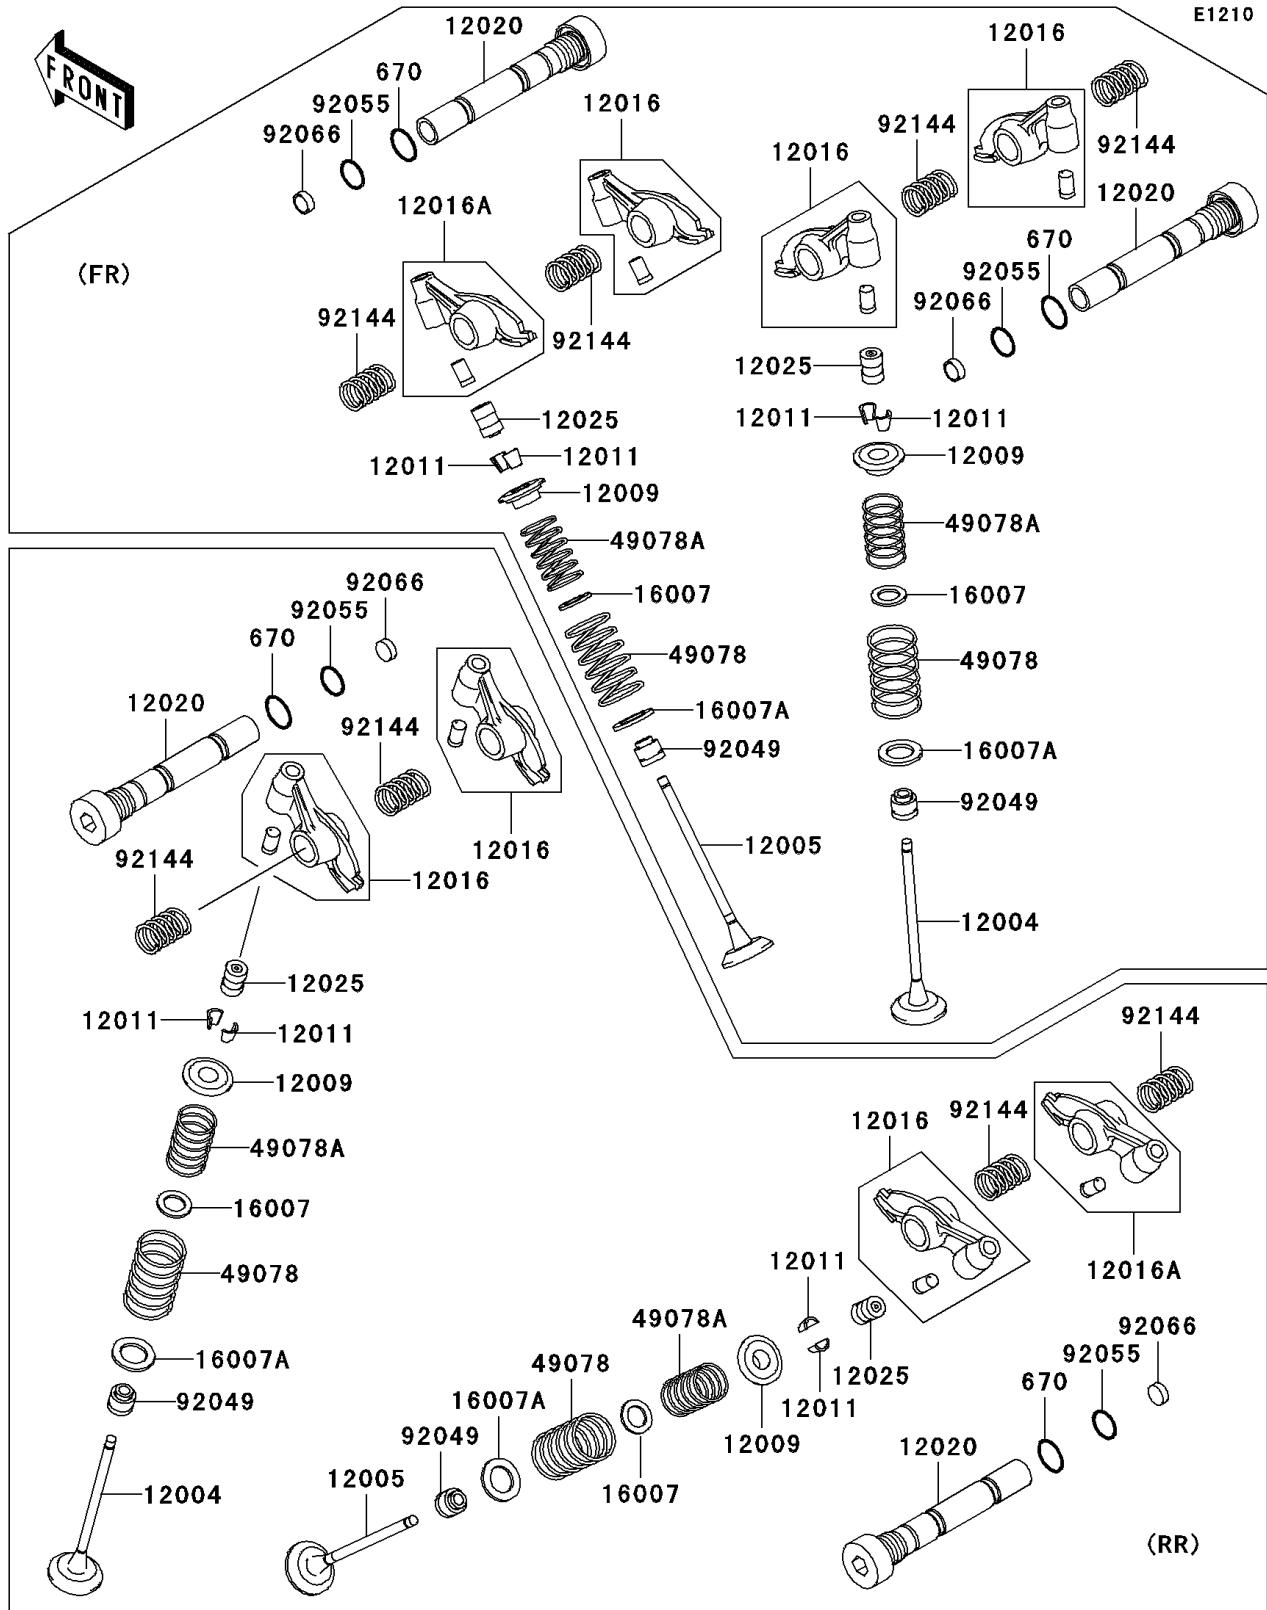

## 2008 Vulcan® 1600 Nomad™ PARTS LIST

Valve(s)

ITEM NAME	PART NUMBER	QUANTITY
O RING,20MM (Ref # 670)	670B2020	4
VALVE-INTAKE (Ref # 12004)	12004-1072	4
VALVE-EXHAUST (Ref # 12005)	12005-1268	4
RETAINER-VALVE SPRING (Ref # 12009)	12009-005	8
COLLET,RETAINER (Ref # 12011)	12011-004	16
ARM-ROCKER (Ref # 12016)	12016-1112	6
ARM-ROCKER (Ref # 12016A)	12016-1113	2
SHAFT-ROCKER (Ref # 12020)	12020-1061	4
ADJUSTER-LASH (Ref # 12025)	12025-1053	8
SEAT-SPRING,12X20X0.5 (Ref # 16007)	16007-1031	8
SEAT-SPRING,21X29.5X0.5 (Ref # 16007A)	16007-1137	8
SPRING-ENGINE VALVE,OUTER (Ref # 49078)	49078-1157	8
SPRING-ENGINE VALVE,INNER (Ref # 49078A)	49078-1158	8
SEAL-OIL,RV37129.5 (Ref # 92049)	92049-016	8
RING-O,12X1.5 (Ref # 92055)	92055-025	4
PLUG (Ref # 92066)	92066-1198	4
SPRING,ROCKER ARM (Ref # 92144)	92144-1221	8