


2005 Ninja® ZX™-12R PARTS DIAGRAM

Fuel Injection(B3/B4)

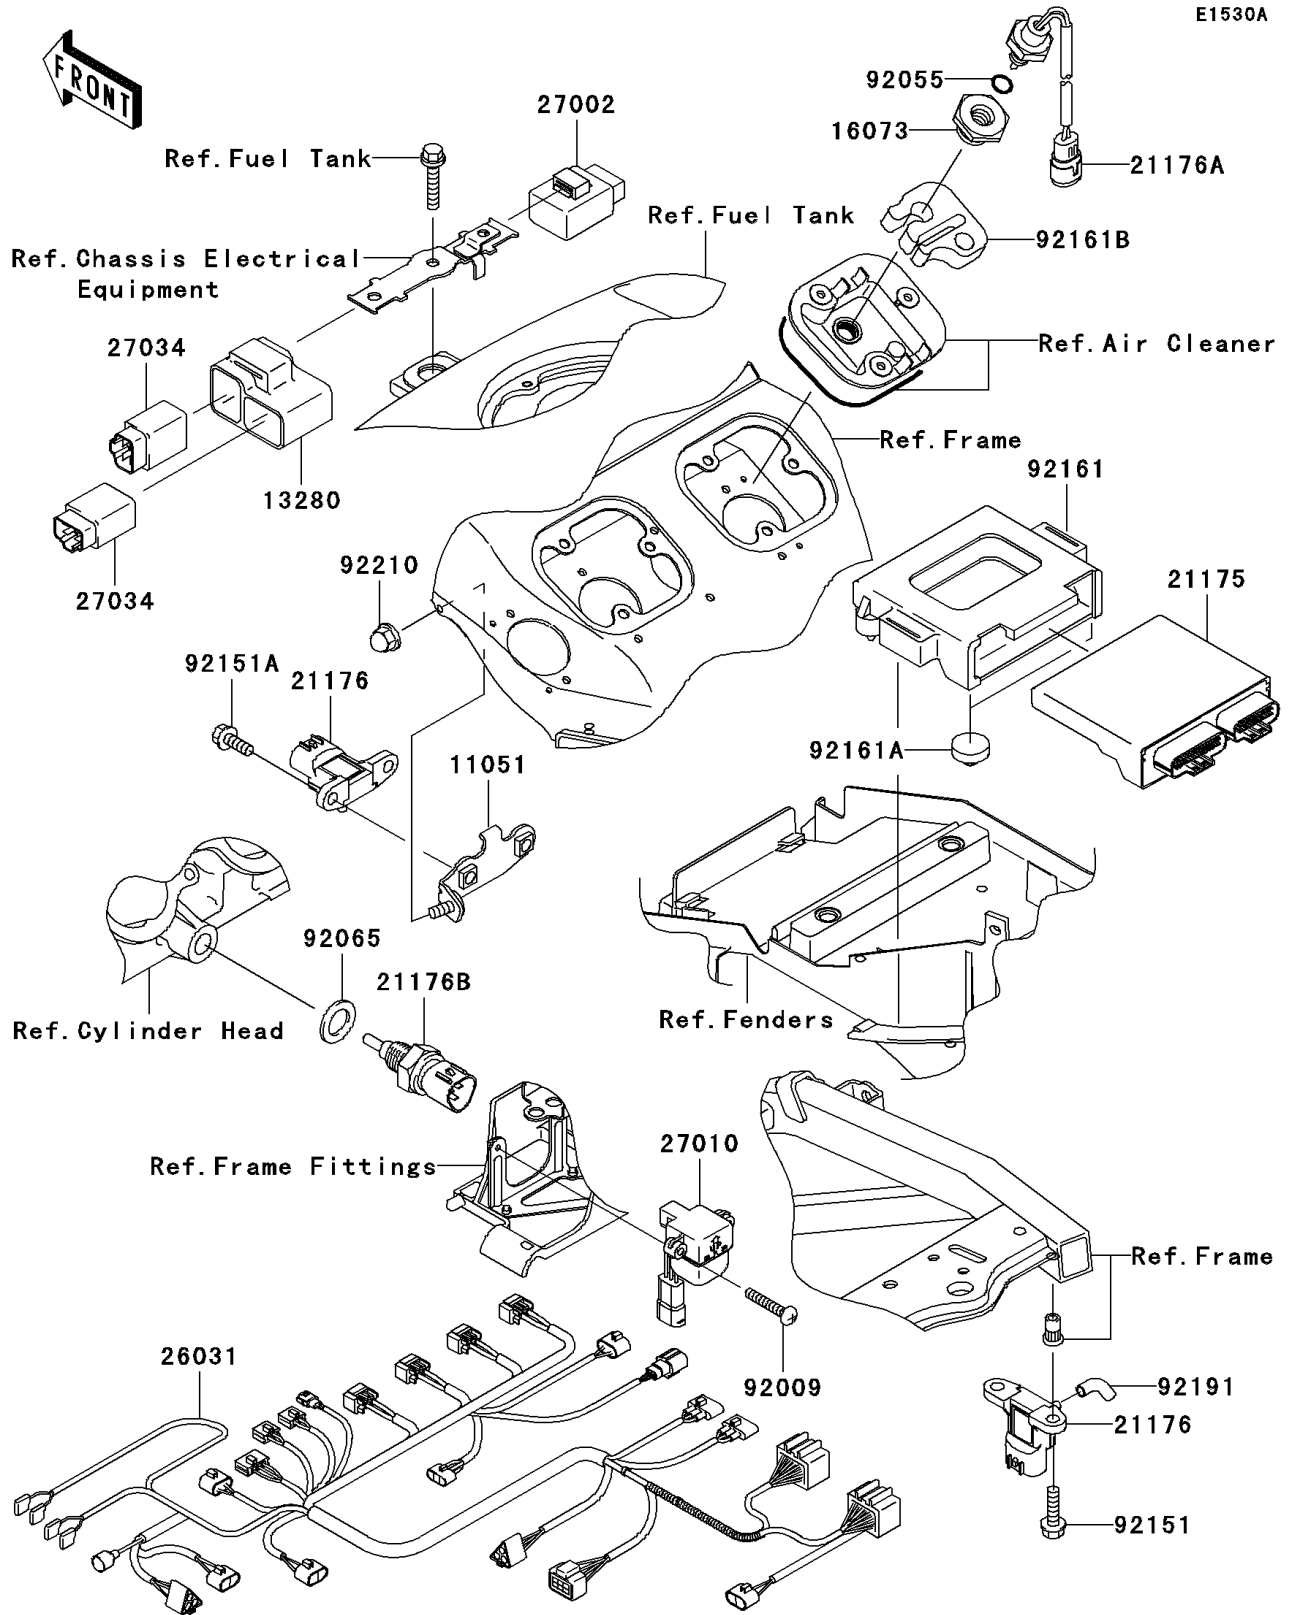

2005 Ninja® ZX™-12R PARTS LIST

Fuel Injection(B3/B4)

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11051)	11051-1660	1
HOLDER,RELAY ASSY (Ref # 13280)	13280-1274	1
INSULATOR (Ref # 16073)	16073-1121	1
CONTROL UNIT-ELECTRONIC (Ref # 21175)	21175-0038	1
SENSOR,PRESSURE (Ref # 21176)	21176-1095	2
SENSOR,AIR TEMPERATURE (Ref # 21176A)	21176-1097	1
SENSOR,WATER TEMPERATURE (Ref # 21176B)	21176-1098	1
HARNESS (Ref # 26031)	26031-0137	1
RELAY-ASSY (Ref # 27002)	27002-1062	1
SWITCH (Ref # 27010)	27010-1426	1
RELAY,FAN (Ref # 27034)	27034-1073	2
SCREW,4X20 (Ref # 92009)	92009-1897	2
RING-O,ID=9.5 (Ref # 92055)	92055-1386	1
GASKET,12X22X2 (Ref # 92065)	92065-097	1
BOLT,6X22 (Ref # 92151)	92151-1236	2
BOLT,6X16 (Ref # 92151A)	92151-1774	2
DAMPER,CONTROL UNIT (Ref # 92161)	92161-0181	1
DAMPER (Ref # 92161A)	92161-0183	2
DAMPER (Ref # 92161B)	92161-1144	1
TUBE (Ref # 92191)	92191-1499	1
NUT (Ref # 92210)	92210-1252	1