


# Mule 500 PARTS DIAGRAM

Starter Motor

E1840

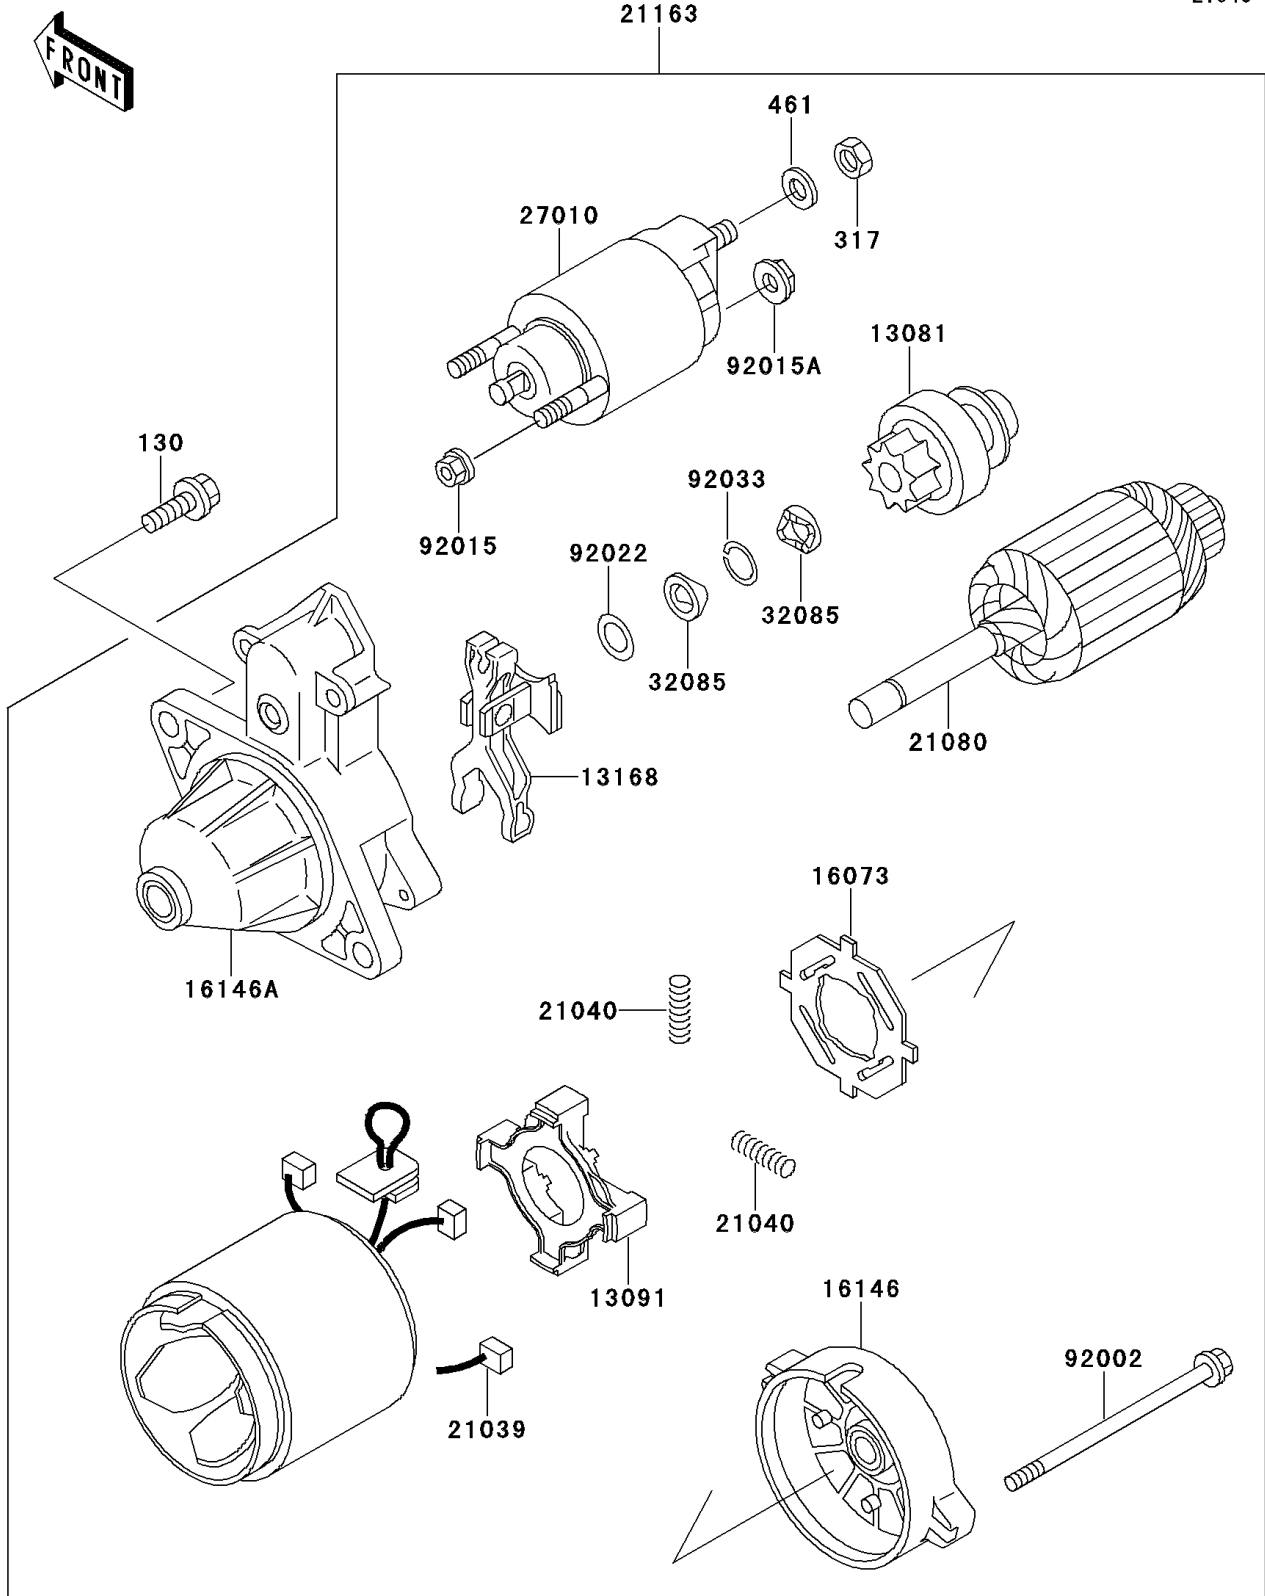

## Mule 500 PARTS LIST

### Starter Motor

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,8X25 (Ref # 130)	130G0825	2
NUT-HEX-SMALL,8MM (Ref # 317)	317B0800	1
WASHER-SPRING,8MM (Ref # 461)	461F0800	1
CLUTCH-ASSY (Ref # 13081)	13081-2164	1
HOLDER,BRUSH (Ref # 13091)	13091-2068	1
LEVER,SHIFT (Ref # 13168)	13168-2148	1
INSULATOR (Ref # 16073)	16073-2098	1
COVER-ASSY,RR (Ref # 16146)	16146-2164	1
COVER-ASSY,FR (Ref # 16146A)	16146-2191	1
BRUSH (Ref # 21039)	21039-2059	4
SPRING-BRUSH (Ref # 21040)	21040-2052	4
ARMATURE (Ref # 21080)	21080-2064	1
STARTER-ELECTRIC (Ref # 21163)	21163-2109	1
SWITCH (Ref # 27010)	27010-2122	1
STOPPER (Ref # 32085)	32085-2066	2
BOLT (Ref # 92002)	92002-2277	2
NUT (Ref # 92015)	92015-2146	2
NUT (Ref # 92015A)	92015-2147	1
WASHER (Ref # 92022)	92022-2218	1
RING-SNAP (Ref # 92033)	92033-2081	1