


1998 Ninja® 500R PARTS DIAGRAM

Rear Wheel/Chain

F2240

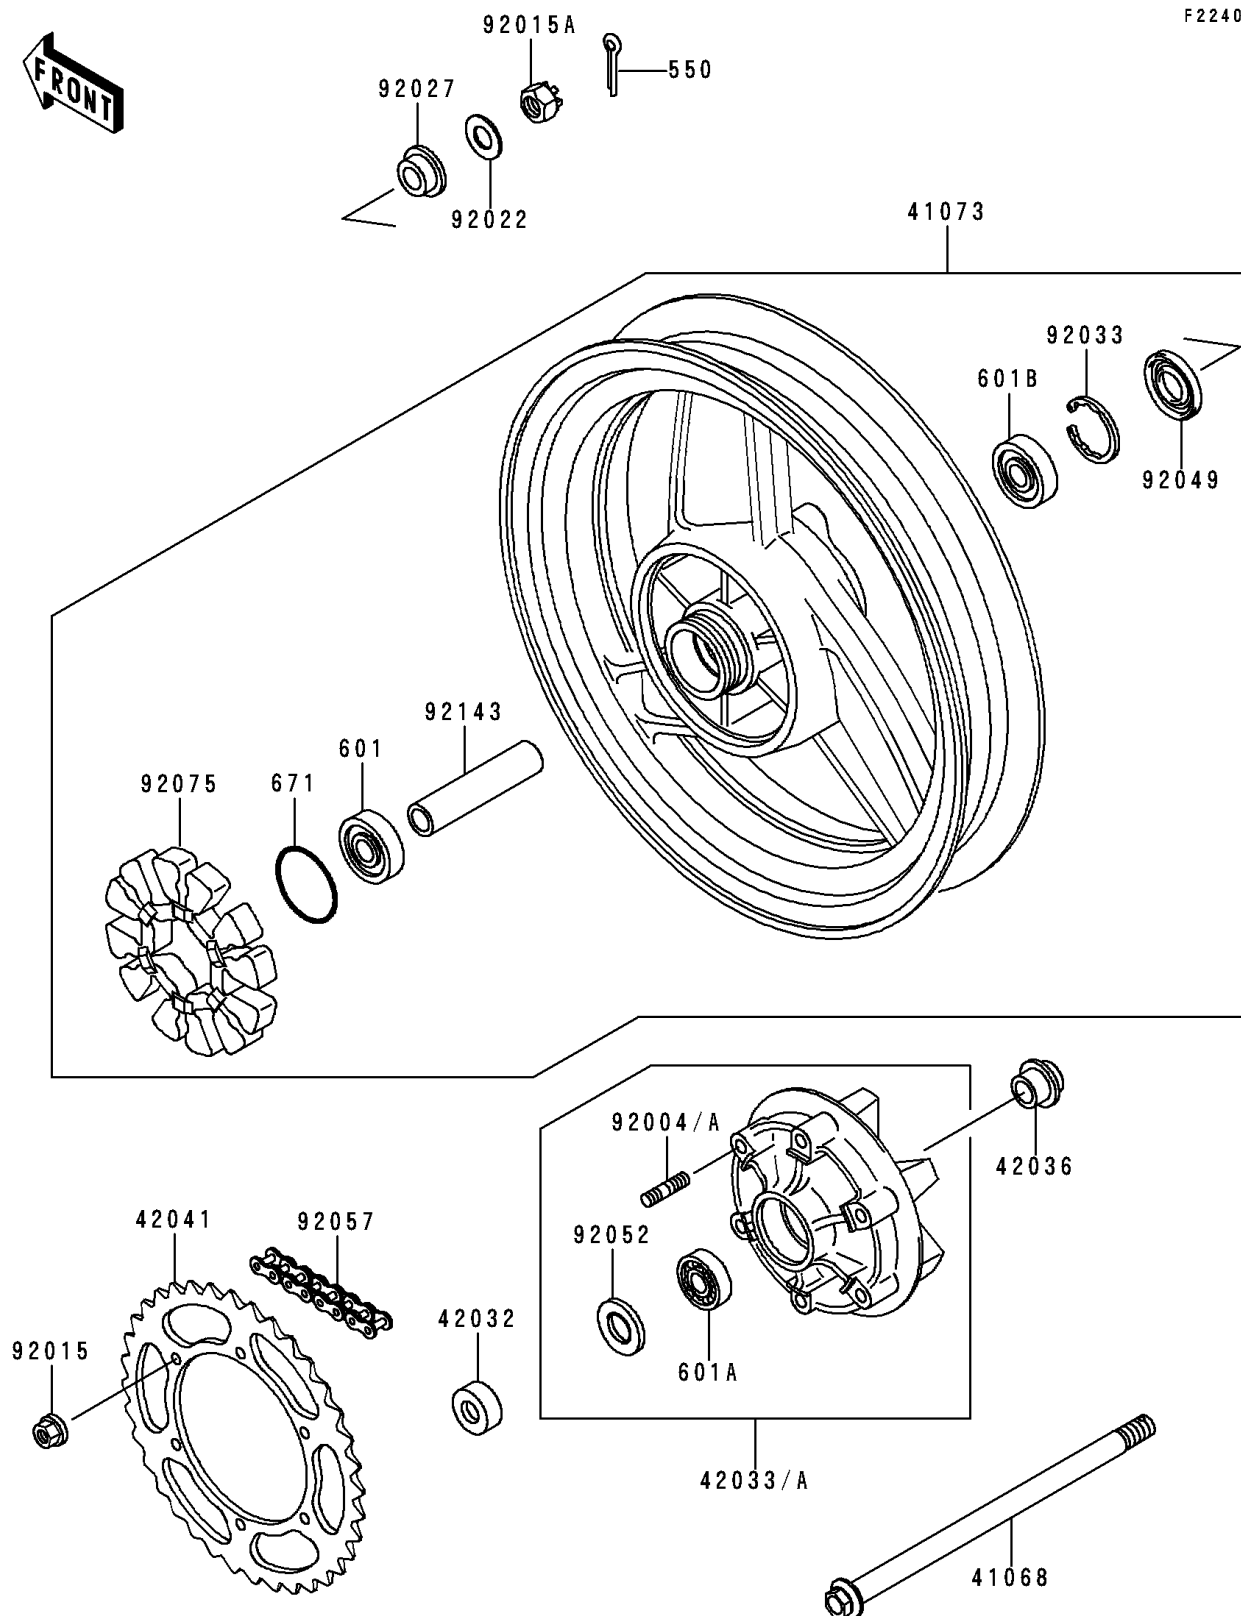

1998 Ninja® 500R PARTS LIST

Rear Wheel/Chain

ITEM NAME	PART NUMBER	QUANTITY
PIN-COTTER,4.0X35 (Ref # 550)	550D4035	1
BEARING-BALL,#6203UUC3 (Ref # 601)	601B6203UU	1
BEARING-BALL,#6205G (Ref # 601A)	601B6205G	1
BEARING-BALL,#6303UUC3 (Ref # 601B)	601B6303UU	1
O RING (Ref # 671)	671B2550	1
AXLE,RR (Ref # 41068)	41068-1223	1
WHEEL-ASSY,RR,G.GRAY (Ref # 41073)	41073-1474-GE	1
COLLAR,RR AXLE,L=13 (Ref # 42032)	42032-063	1
COUPLING-ASSY,RR HUB,M.SILVER (Ref # 42033A)	42033-1191-7J	1
SLEEVE,RR HUB,L=30 (Ref # 42036)	42036-1055	1
SPROCKET-HUB,41T (Ref # 42041)	42041-1354	1
STUD,10X19.5 (Ref # 92004A)	92004-1151	6
NUT,10MM (Ref # 92015)	92015-1720	6
NUT,CASTLE,16MM (Ref # 92015A)	92015-1947	1
WASHER,17.5X34X2.0 (Ref # 92022)	92022-1916	1
COLLAR,RR HUB (Ref # 92027)	92027-1785	1
RING-SNAP,47MM (Ref # 92033)	92033-1042	1
SEAL-OIL,BJN28475 (Ref # 92049)	92049-1056	1
SEAL-OIL,TWC35527 (Ref # 92052)	92052-006	1
CHAIN,DRIVE,EK520SX-OX104L (Ref # 92057)	92057-1296	1
DAMPER,RR HUB SHOCK (Ref # 92075)	92075-1436	1
COLLAR,RR HUB,L=111 (Ref # 92143)	92143-1416	1