


# 1987 Ninja® 600 PARTS DIAGRAM

## SHOCK ABSORBER

F2280-0014

R  
N

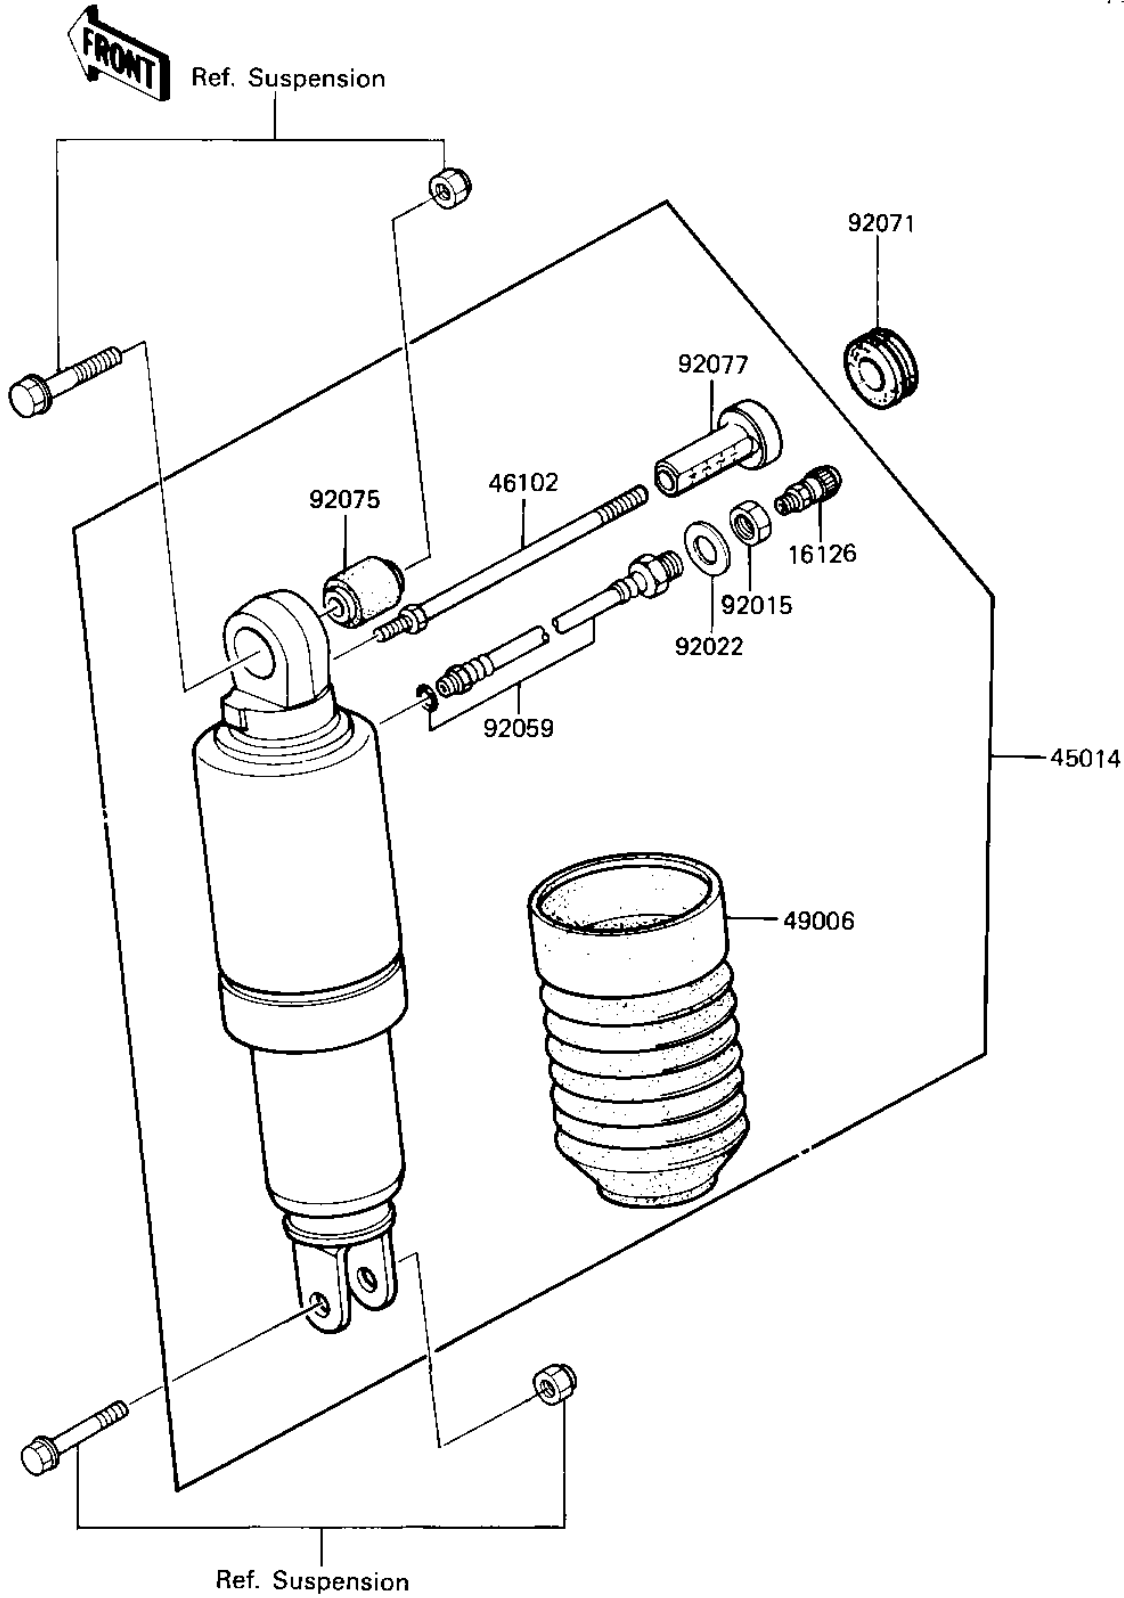

1  
4  
4  
4  
9  
9  
9  
9  
9

# 1987 Ninja® 600 PARTS LIST

## SHOCK ABSORBER

ITEM NAME	PART NUMBER	QUANTITY
VALVE AIR (Ref # 16126)	16126-1052	1
SHOCKABSORBER (Ref # 45014)	45014-1307	1
ROD (Ref # 46102)	46102-1151	1
BOOT,RR SHOCKABSORBER (Ref # 49006)	49006-1151	1
NUT,14MM (Ref # 92015)	92015-1305	1
WASHER (Ref # 92022)	92022-1494	1
TUBE,SHOCKABSORBER (Ref # 92059)	92059-1364	1
GROMMET (Ref # 92071)	92071-056	1
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1654	1
KNOB,RR SHOCKABSORBER (Ref # 92077)	92077-1051	1