


# 2011 VULCAN® 1700 VOYAGER® ABS PARTS DIAGRAM


Fenders

F2170

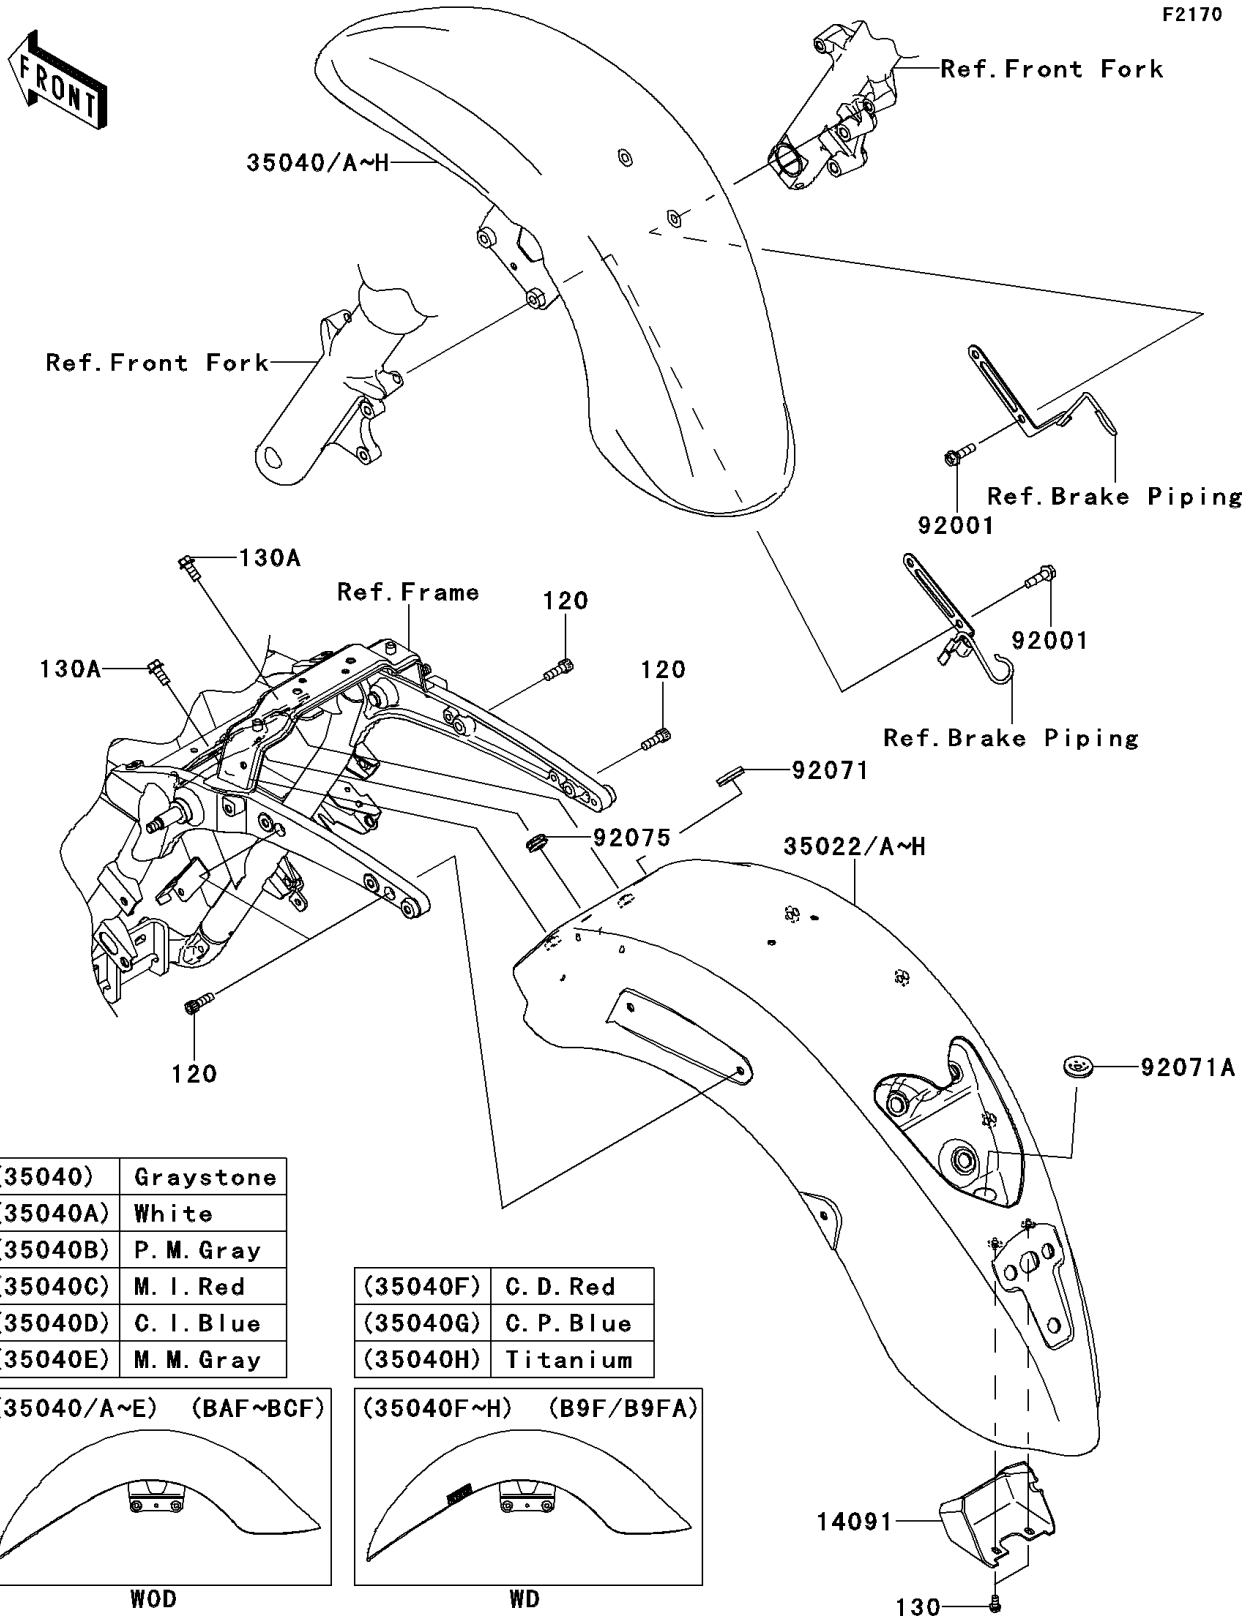


(35040)	Graystone
(35040A)	White
(35040B)	P. M. Gray
(35040C)	M. I. Red
(35040D)	C. I. Blue
(35040E)	M. M. Gray

(35040F)	C. D. Red
(35040G)	C. P. Blue
(35040H)	Titanium

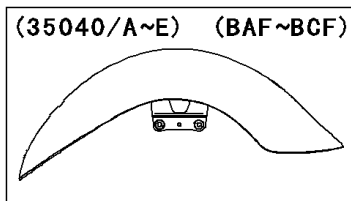

WOD

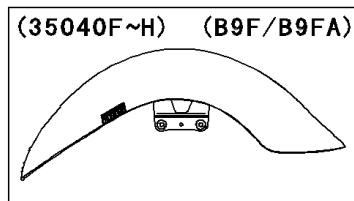

WD

## 2011 VULCAN® 1700 VOYAGER® ABS PARTS LIST

### Fenders

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,8X25 (Ref # 120)	120CA0825	4
BOLT-FLANGED,6X12 (Ref # 130)	130BA0612	2
BOLT-FLANGED,8X16 (Ref # 130A)	130BA0816	2
COVER,HARNESS CONNECTOR (Ref # 14091)	14091-1630	1
FENDER-COMP-REAR,P.M.GRAY (Ref # 35022B)	35022-0066-10H	1
FENDER-COMP-FRONT,P.M.GRAY (Ref # 35040B)	35040-0017-10H	1
BOLT,FLANGED,8X28 (Ref # 92001)	92001-1095	4
GROMMET (Ref # 92071)	92071-1228	1
GROMMET (Ref # 92071A)	92071-1265	1
DAMPER (Ref # 92075)	92075-1067	1
FENDER-COMP-REAR,C.I.BLUE (Ref # 35022E)	35022-0066-25U	1
FENDER-COMP-FRONT,C.I.BLUE (Ref # 35040D)	35040-0017-25U	1