


# 2003 Mojave 250 PARTS DIAGRAM

Footrests

F2160

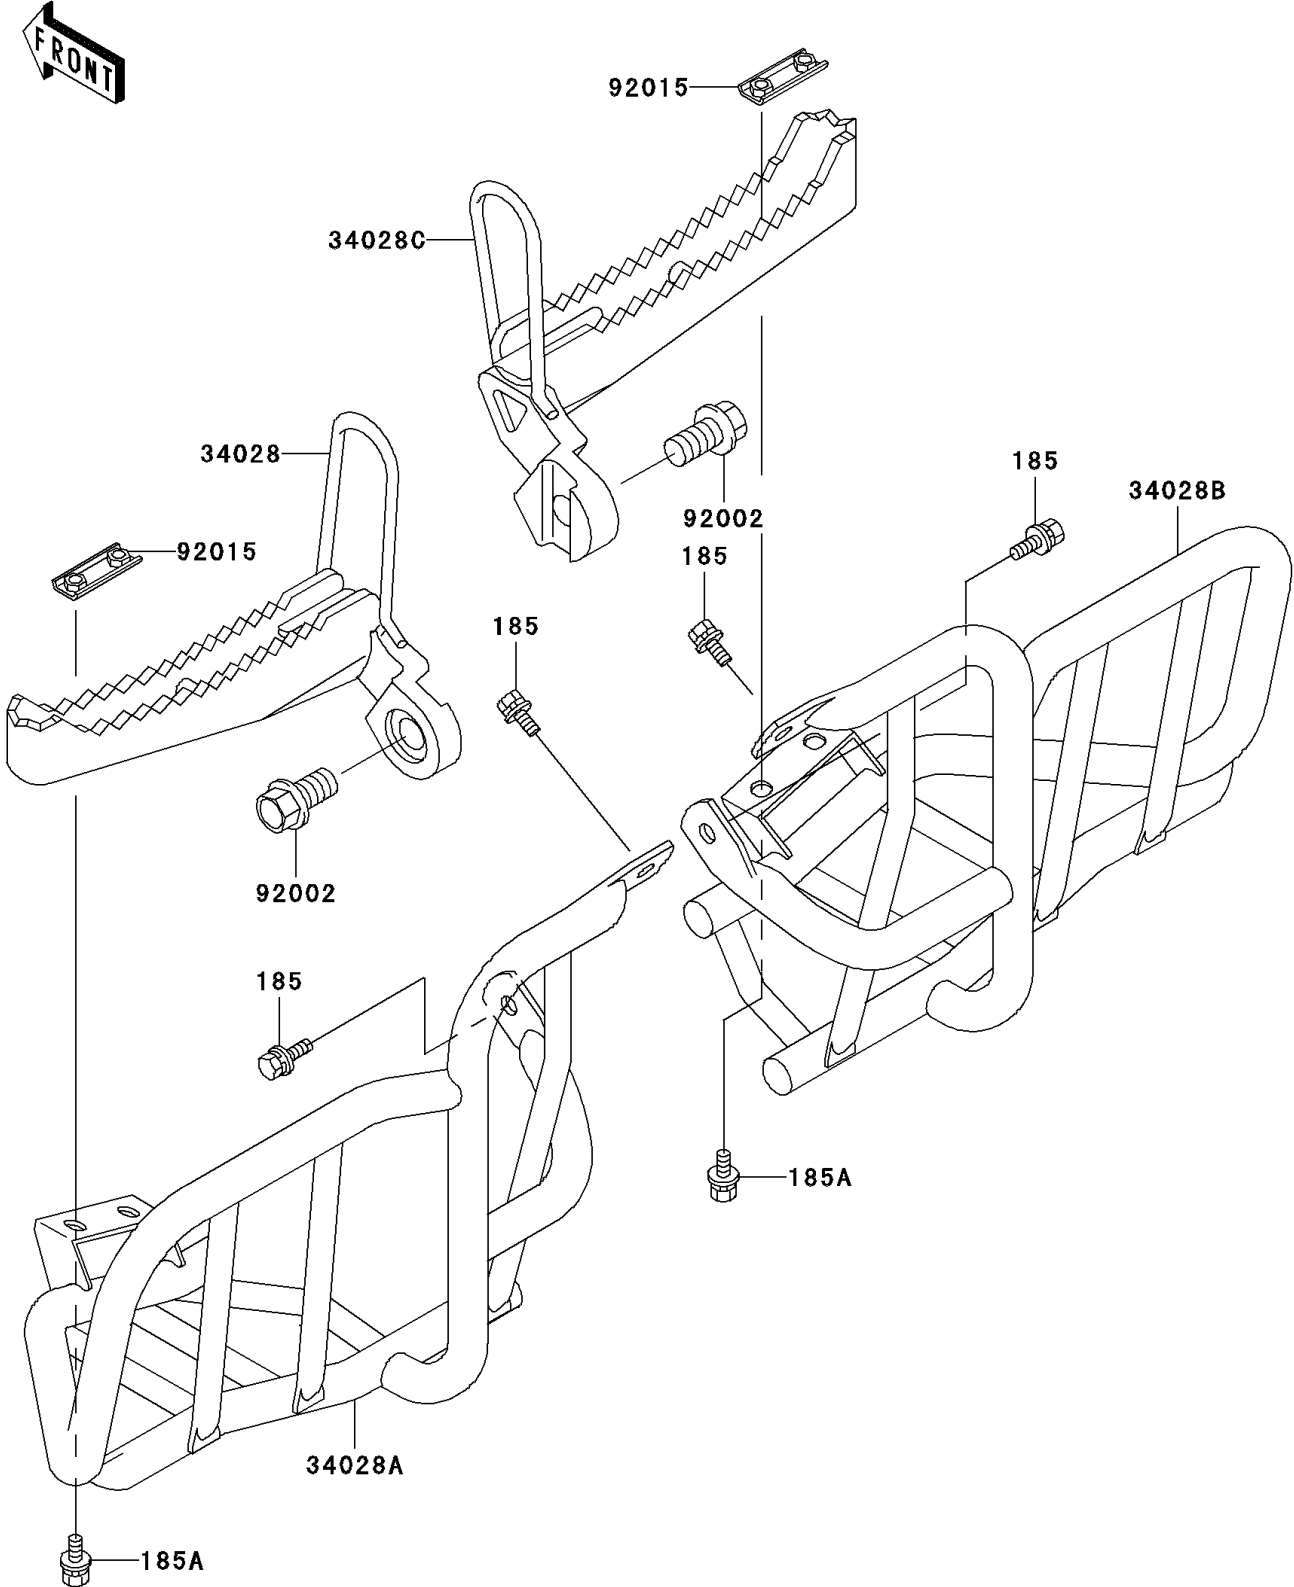

## 2003 Mojave 250 PARTS LIST

### Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-UPSET-WSP-SMALL (Ref # 185)	185J0818	4
BOLT-UPSET-WSP-SMALL,8X20 (Ref # 185A)	185J0820	4
STEP,LH,P.C.GRAY (Ref # 34028)	34028-1366-CQ	1
STEP,FOOT BOARD,LH,P.C.GRAY (Ref # 34028A)	34028-1397-CQ	1
STEP,FOOT BOARD,RH,P.C.GRAY (Ref # 34028B)	34028-1398-CQ	1
STEP,RH,P.C.GRAY (Ref # 34028C)	34028-1509-CQ	1
BOLT,FLANGED,14X25 (Ref # 92002)	92002-1767	2
NUT (Ref # 92015)	92015-1732	2