


# 2003 Mojave 250 PARTS DIAGRAM

Shock Absorber(s)

F2280

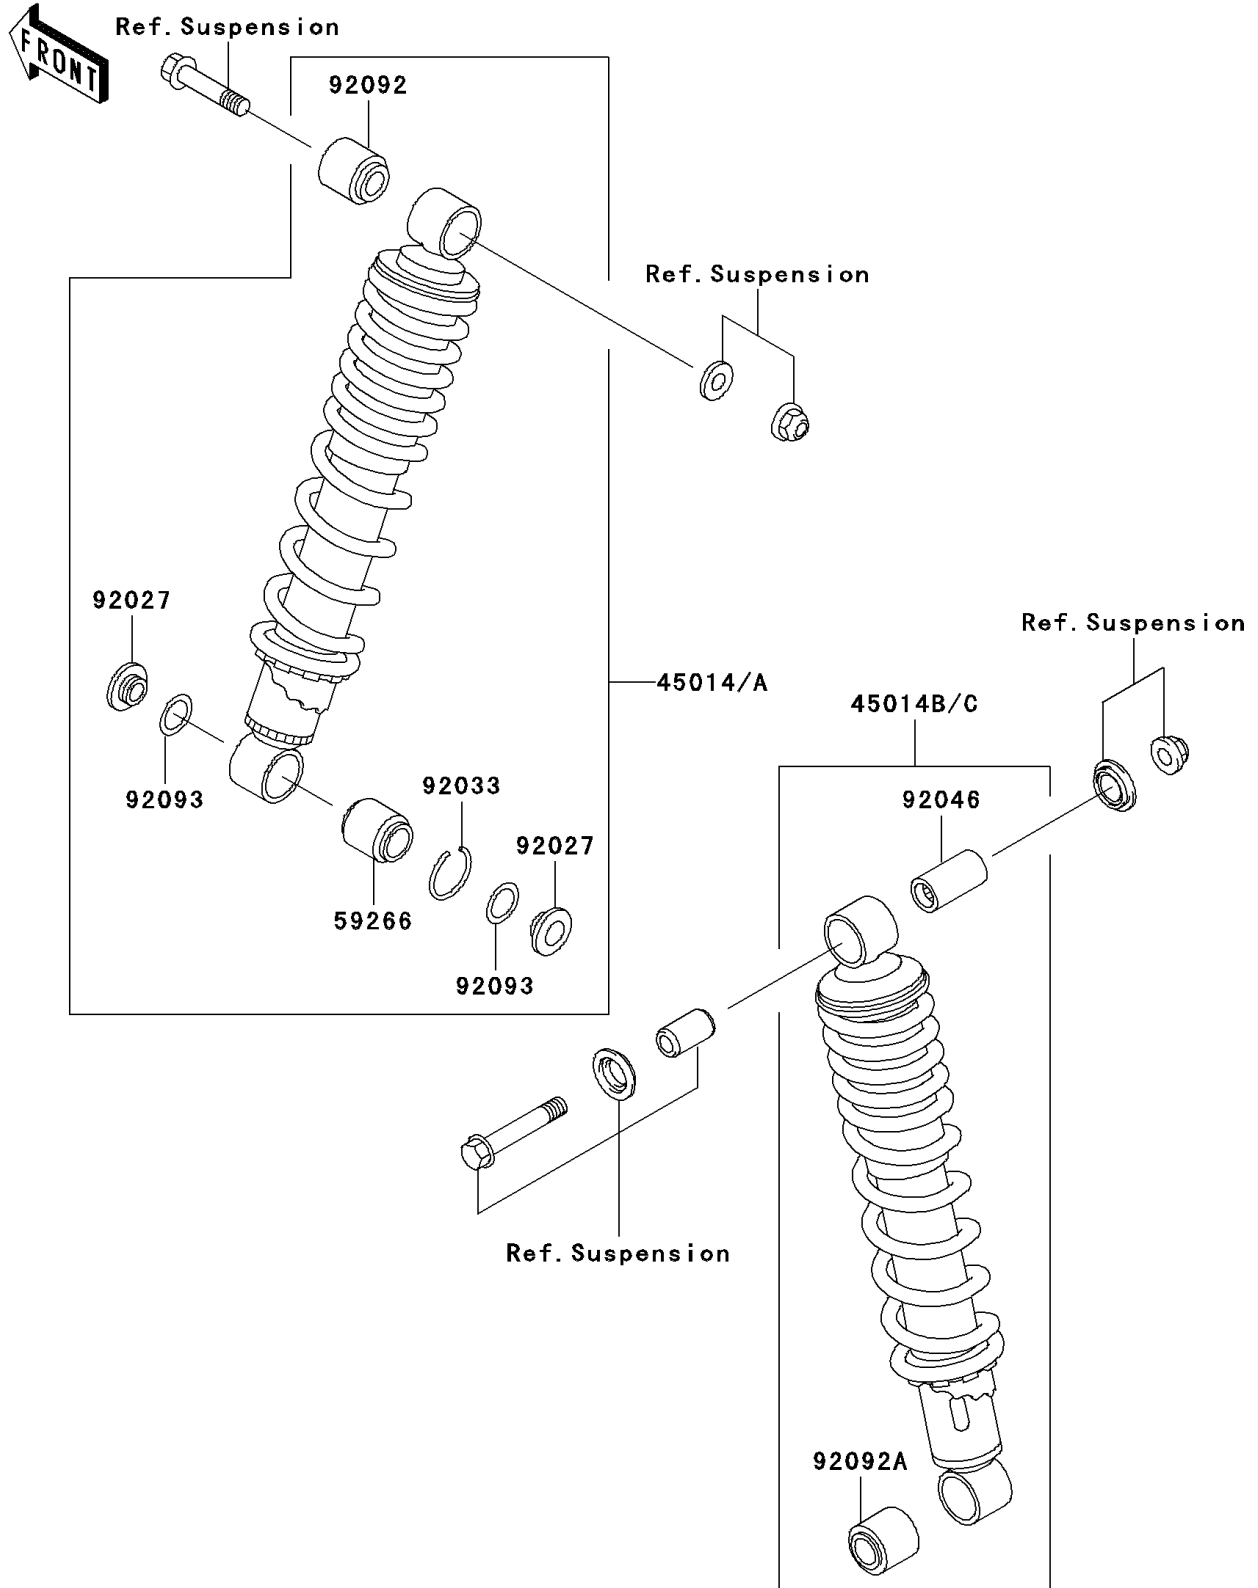

## 2003 Mojave 250 PARTS LIST

### Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER,FR,I.SILVER (Ref # 45014A)	45014-1391-8V	2
SHOCKABSORBER,RR,I.SILVER (Ref # 45014C)	45014-1392-8V	1
JOINT-BALL (Ref # 59266)	59266-1053	2
COLLAR (Ref # 92027)	92027-1862	4
RING-SNAP (Ref # 92033)	92033-1090	2
BEARING-NEEDLE (Ref # 92046)	92046-1046	1
BUSHING-RUBBER,SHOCKABSORBER (Ref # 92092)	92092-1016	2
BUSHING-RUBBER,SHOCKABSORBER (Ref # 92092A)	92092-1054	1
SEAL (Ref # 92093)	92093-1183	4