


# 2008 Prairie 360 4X4 Hardwoods Green HD PARTS DIAGRAM

Shock Absorber(s)

F2280

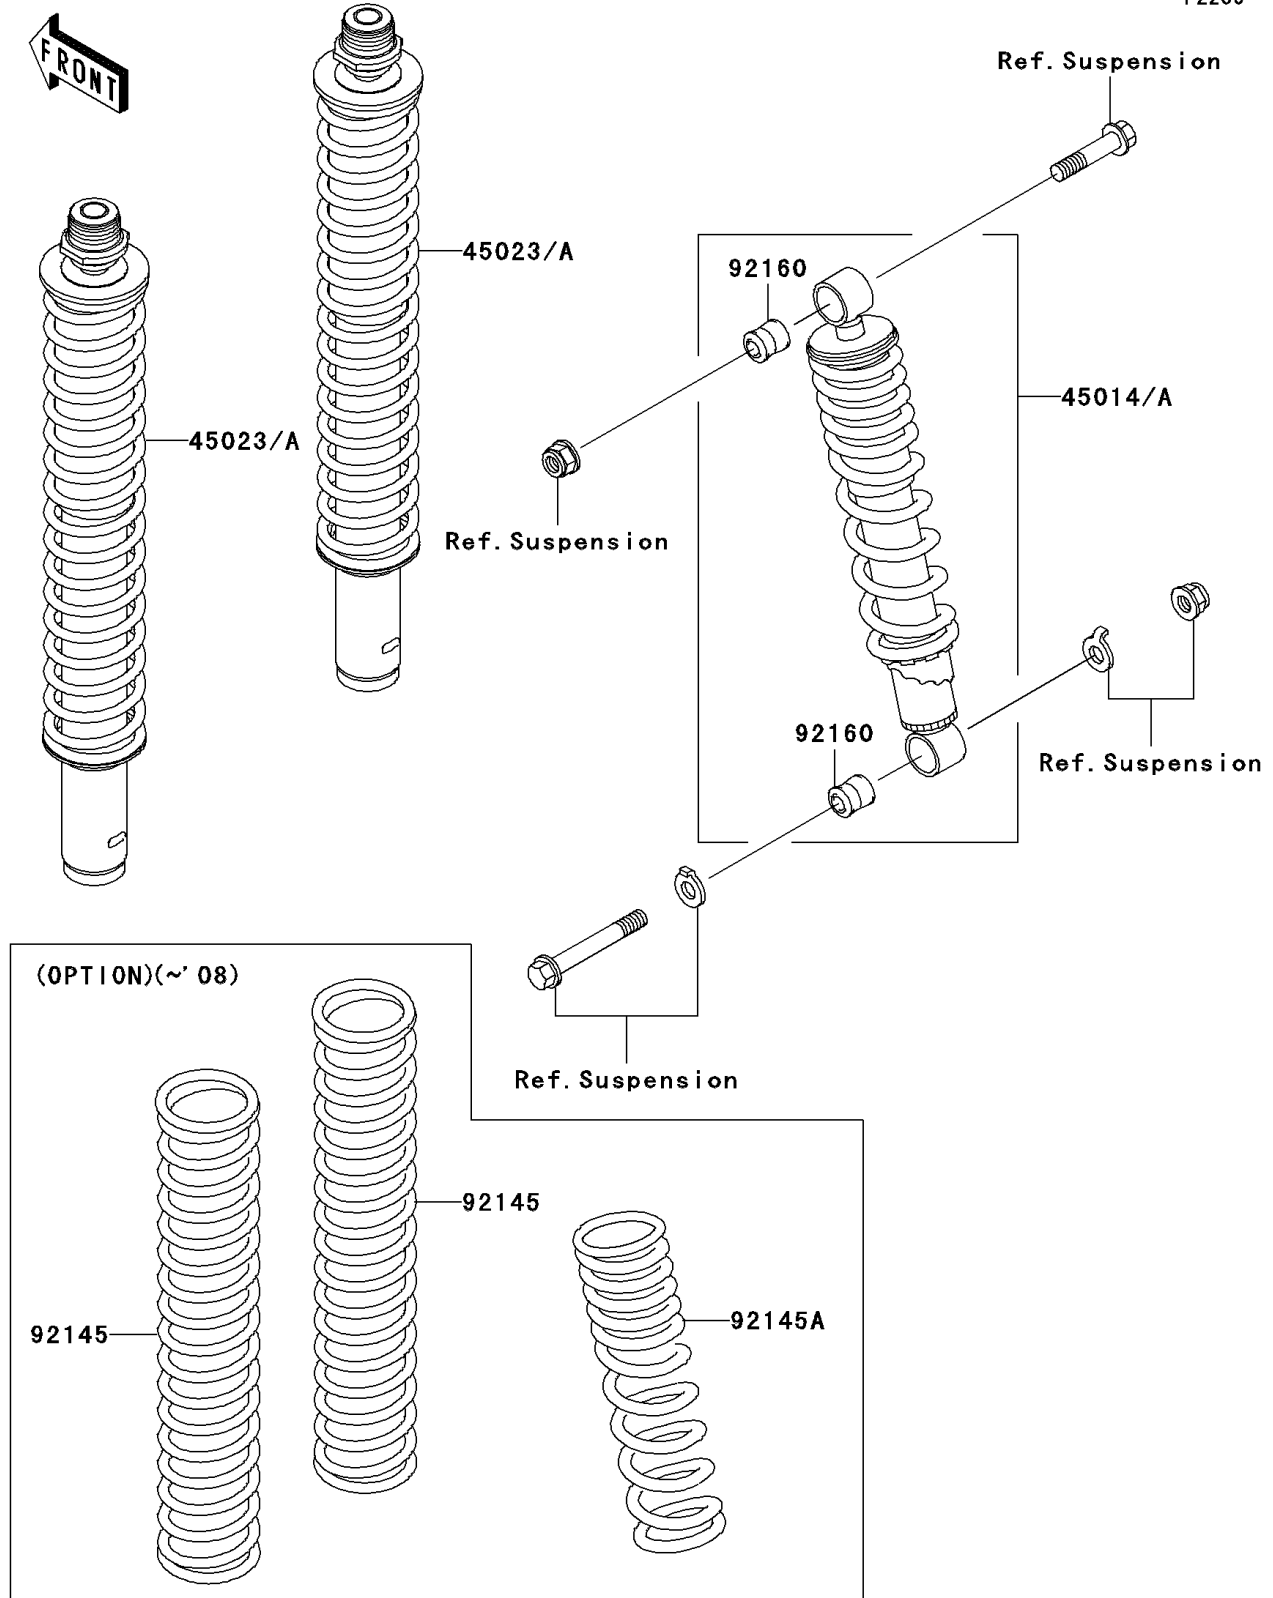

## 2008 Prairie 360 4X4 Hardwoods Green HD PARTS LIST

### Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER (Ref # 45014A)	45014-1838	1
STRUT (Ref # 45023A)	45023-7504	2
SPRING,STRUT,K=9.8N/MM (Ref # 92145)	92145-1225	2
SPRING,SHOCK,K=22.6N/MM (Ref # 92145A)	92145-1271	1
DAMPER,SHOCKABSORBER (Ref # 92160)	92160-1777	2