


1999 Prairie 400 PARTS DIAGRAM

Shock Absorber(s)

F2280

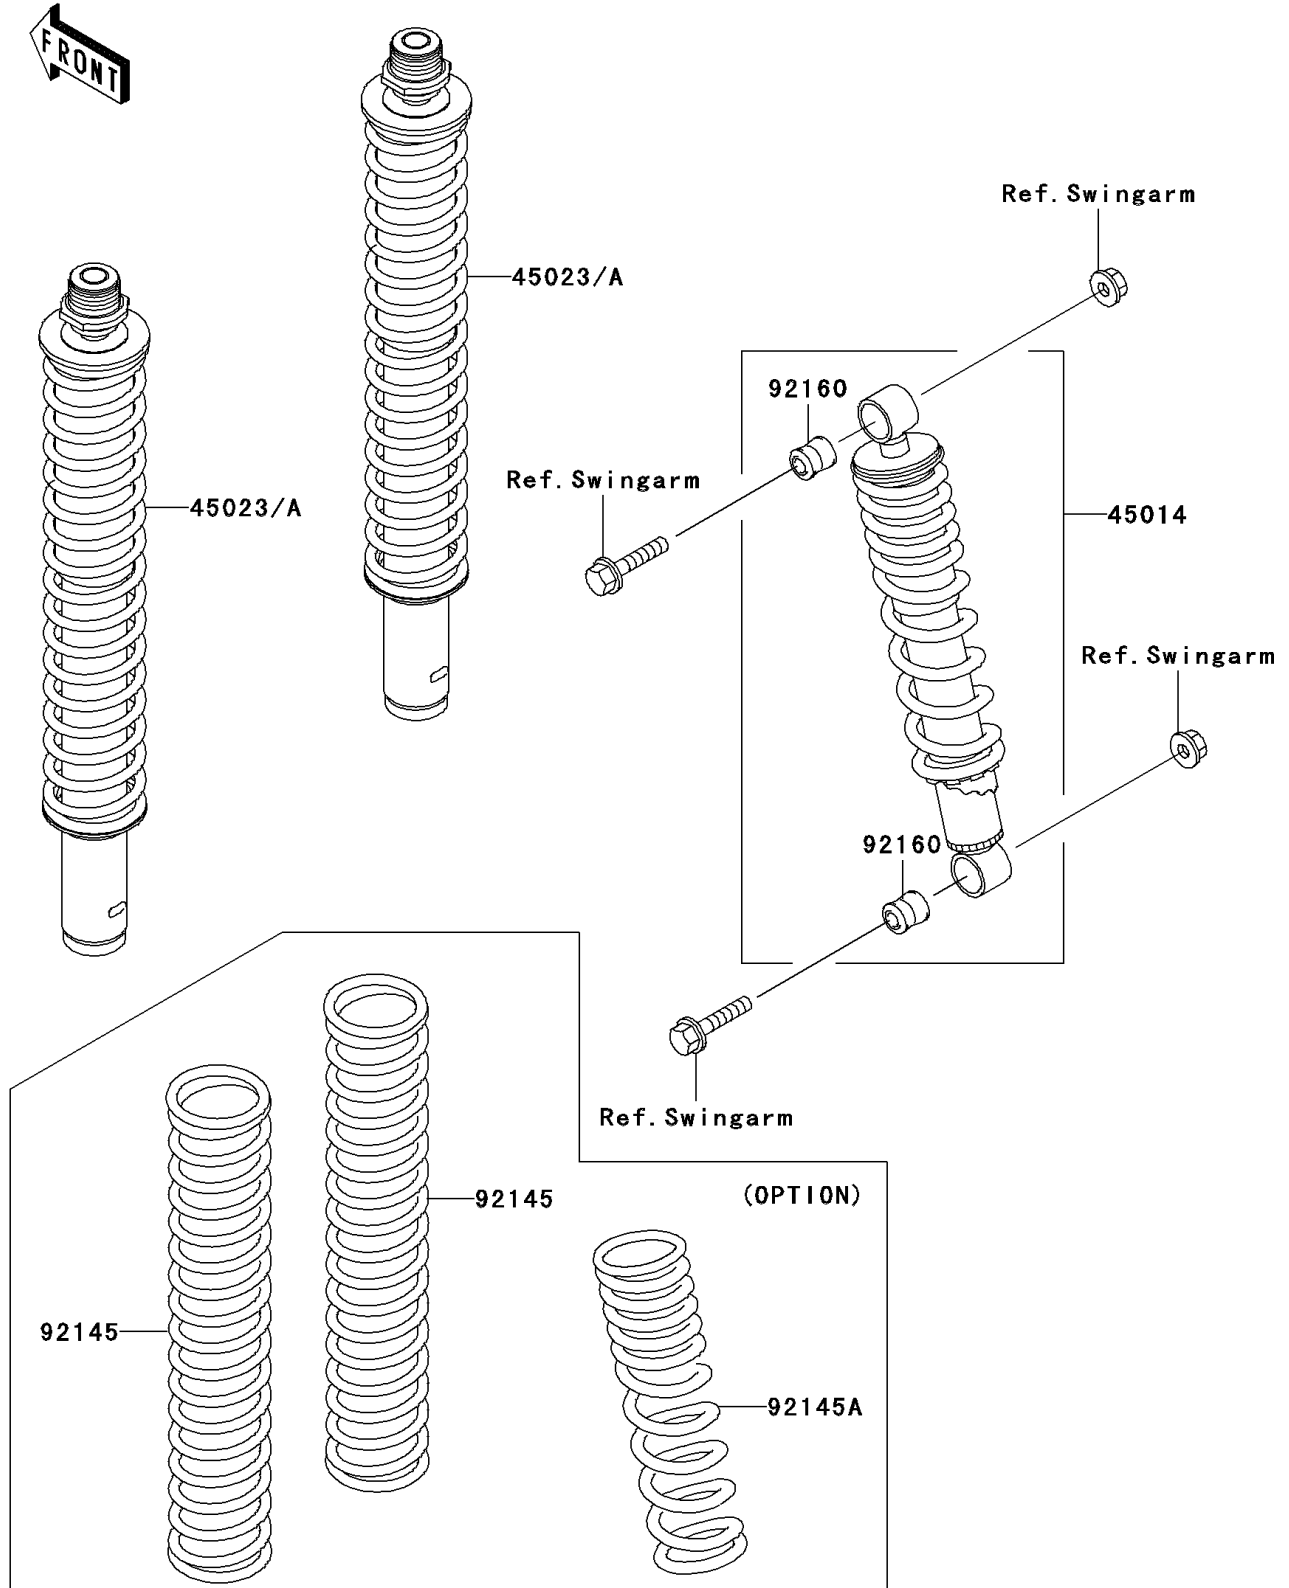

1999 Prairie 400 PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER,RR,F.RED (Ref # 45014)	45014-1709-CD	1
STRUT,FR,F.RED (Ref # 45023)	45023-1009-CD	2
SPRING,STRUT,K=9.8N/MM (Ref # 92145)	92145-1225	2
SPRING,SHOCK,K=22.6N/MM (Ref # 92145A)	92145-1271	1
DAMPER,SHOCKABSORBER (Ref # 92160)	92160-1777	2