


2007 Brute Force 650 4x4i Hardwoods Green HD PARTS DIAGRAM

Front Fender(s)

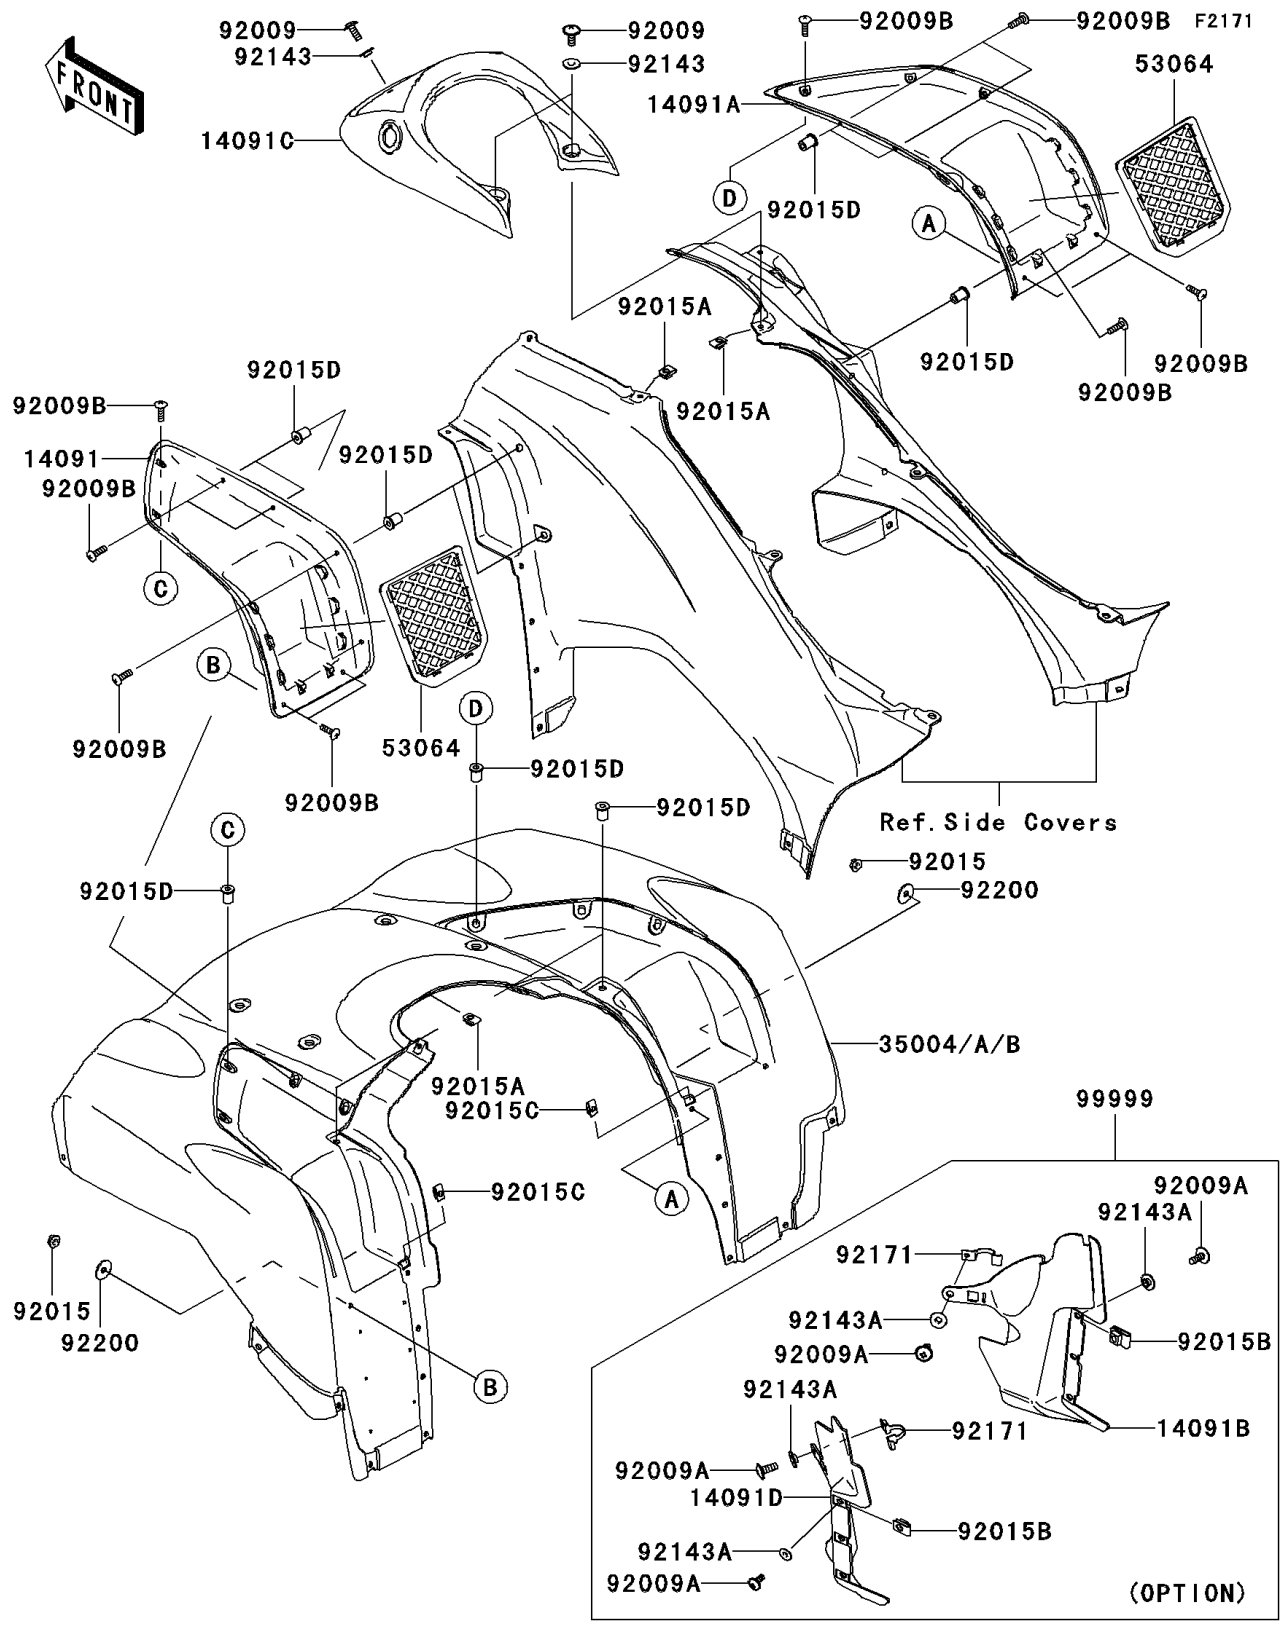

2007 Brute Force 650 4x4i Hardwoods Green HD PARTS LIST

Front Fender(s)

ITEM NAME	PART NUMBER	QUANTITY
COVER,POCKET,LH,F.BLACK (Ref # 14091)	14091-0135-6Z	1
COVER,POCKET,RH,F.BLACK (Ref # 14091A)	14091-0136-6Z	1
COVER,SIDE,INNER,RH (Ref # 14091B)	14091-0179	1
COVER,TOP,F.BLACK (Ref # 14091C)	14091-0270-6Z	1
COVER,SIDE,INNER,LH (Ref # 14091D)	14091-0337	1
FENDER-FRONT,C.H.GREEN (Ref # 35004)	35004-0038-826	1
NET-CARGO (Ref # 53064)	53064-0002	2
SCREW,6X16 (Ref # 92009)	92009-1621	3
SCREW,6X16 (Ref # 92009A)	92009-1621	8
SCREW,5X18 (Ref # 92009B)	92009-1655	17
NUT,FLANGED,5MM (Ref # 92015)	92015-1259	2
NUT,6MM (Ref # 92015A)	92015-1602	3
NUT,6MM (Ref # 92015B)	92015-1602	6
NUT,5MM (Ref # 92015C)	92015-1710	2
NUT,WELL,5MM (Ref # 92015D)	92015-1757	15
COLLAR (Ref # 92143)	92143-1087	3
COLLAR (Ref # 92143A)	92143-1087	8
CLAMP (Ref # 92171)	92171-0223	2
WASHER,5.5X20X1.2 (Ref # 92200)	92200-0284	2
INNER FENDER KIT (Ref # 99999)	99999-0055	1