


2008 Brute Force 750 4x4i Hardwoods Green HD PARTS DIAGRAM

Shock Absorber(s)

F2280

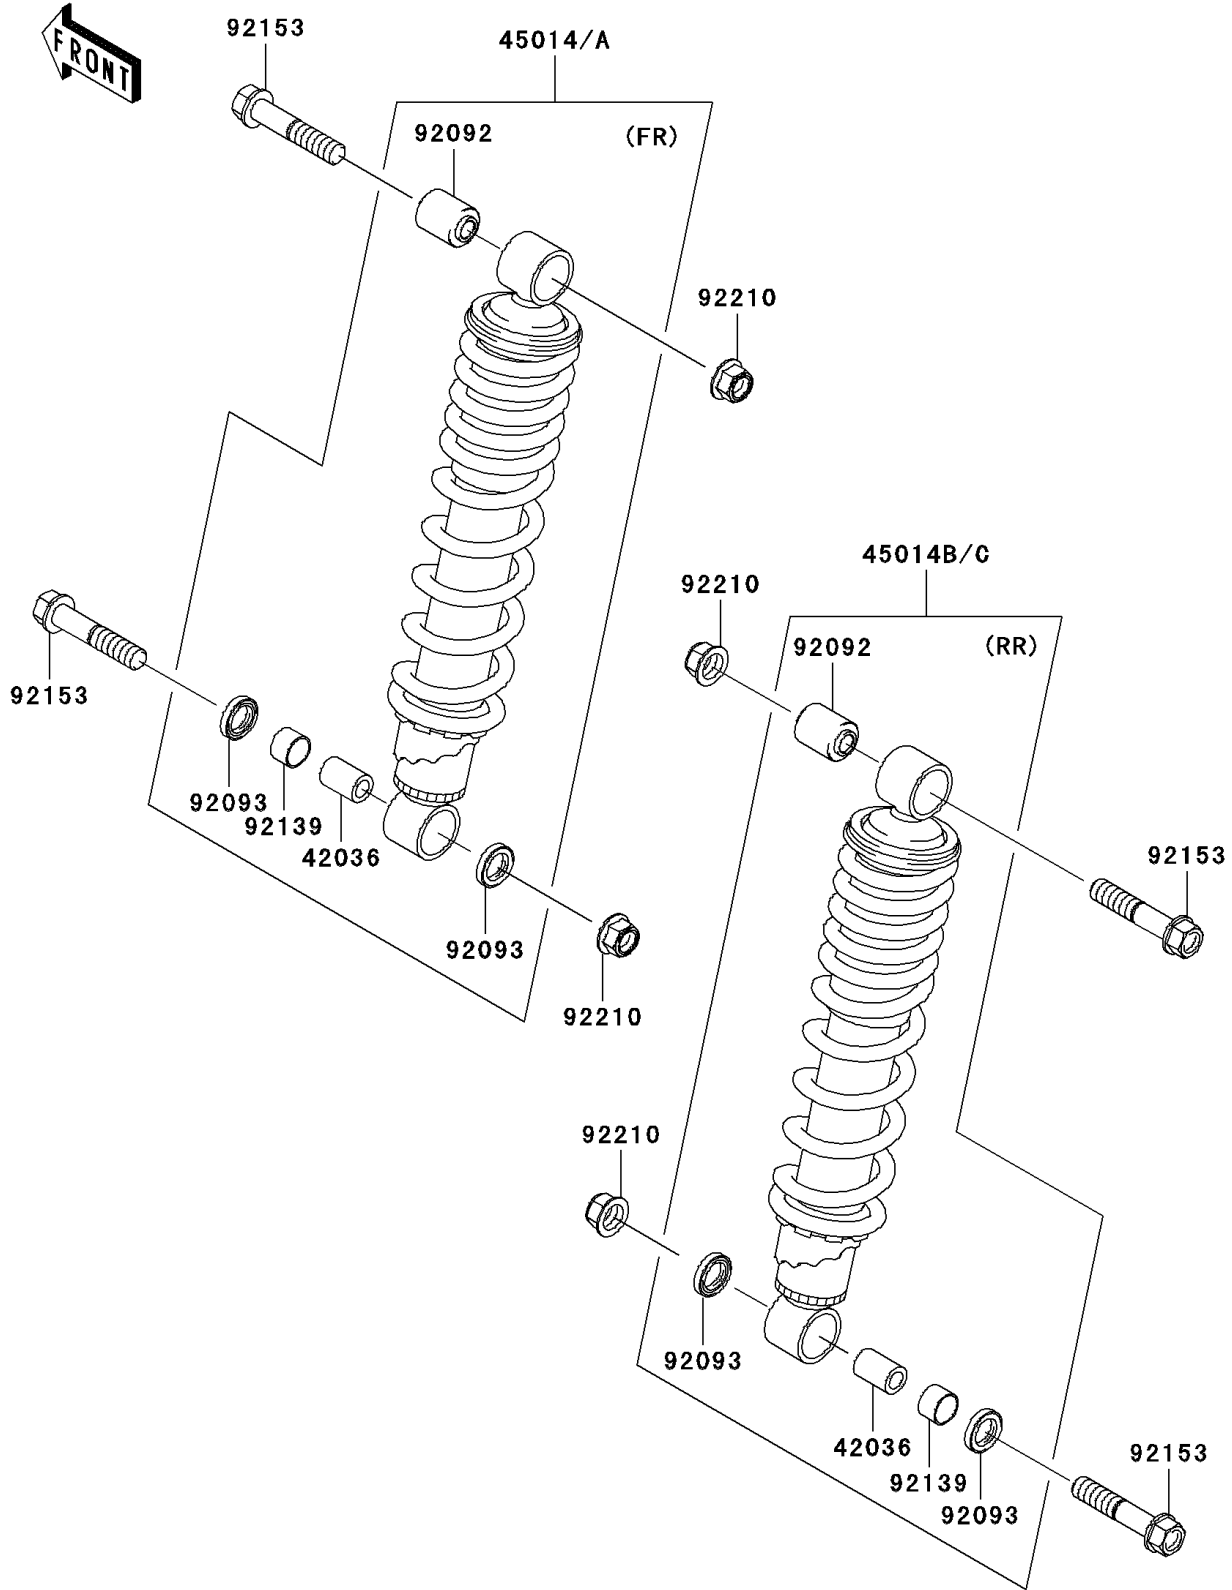

2008 Brute Force 750 4x4i Hardwoods Green HD PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR,BLACK (Ref # 45014)	45014-0203-10	2
SHOCKABSORBER,RR,BLACK (Ref # 45014B)	45014-0204-10	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8