


2010 Brute Force 750 4x4i Realtree APG HD PARTS DIAGRAM

Shock Absorber(s)

F2280

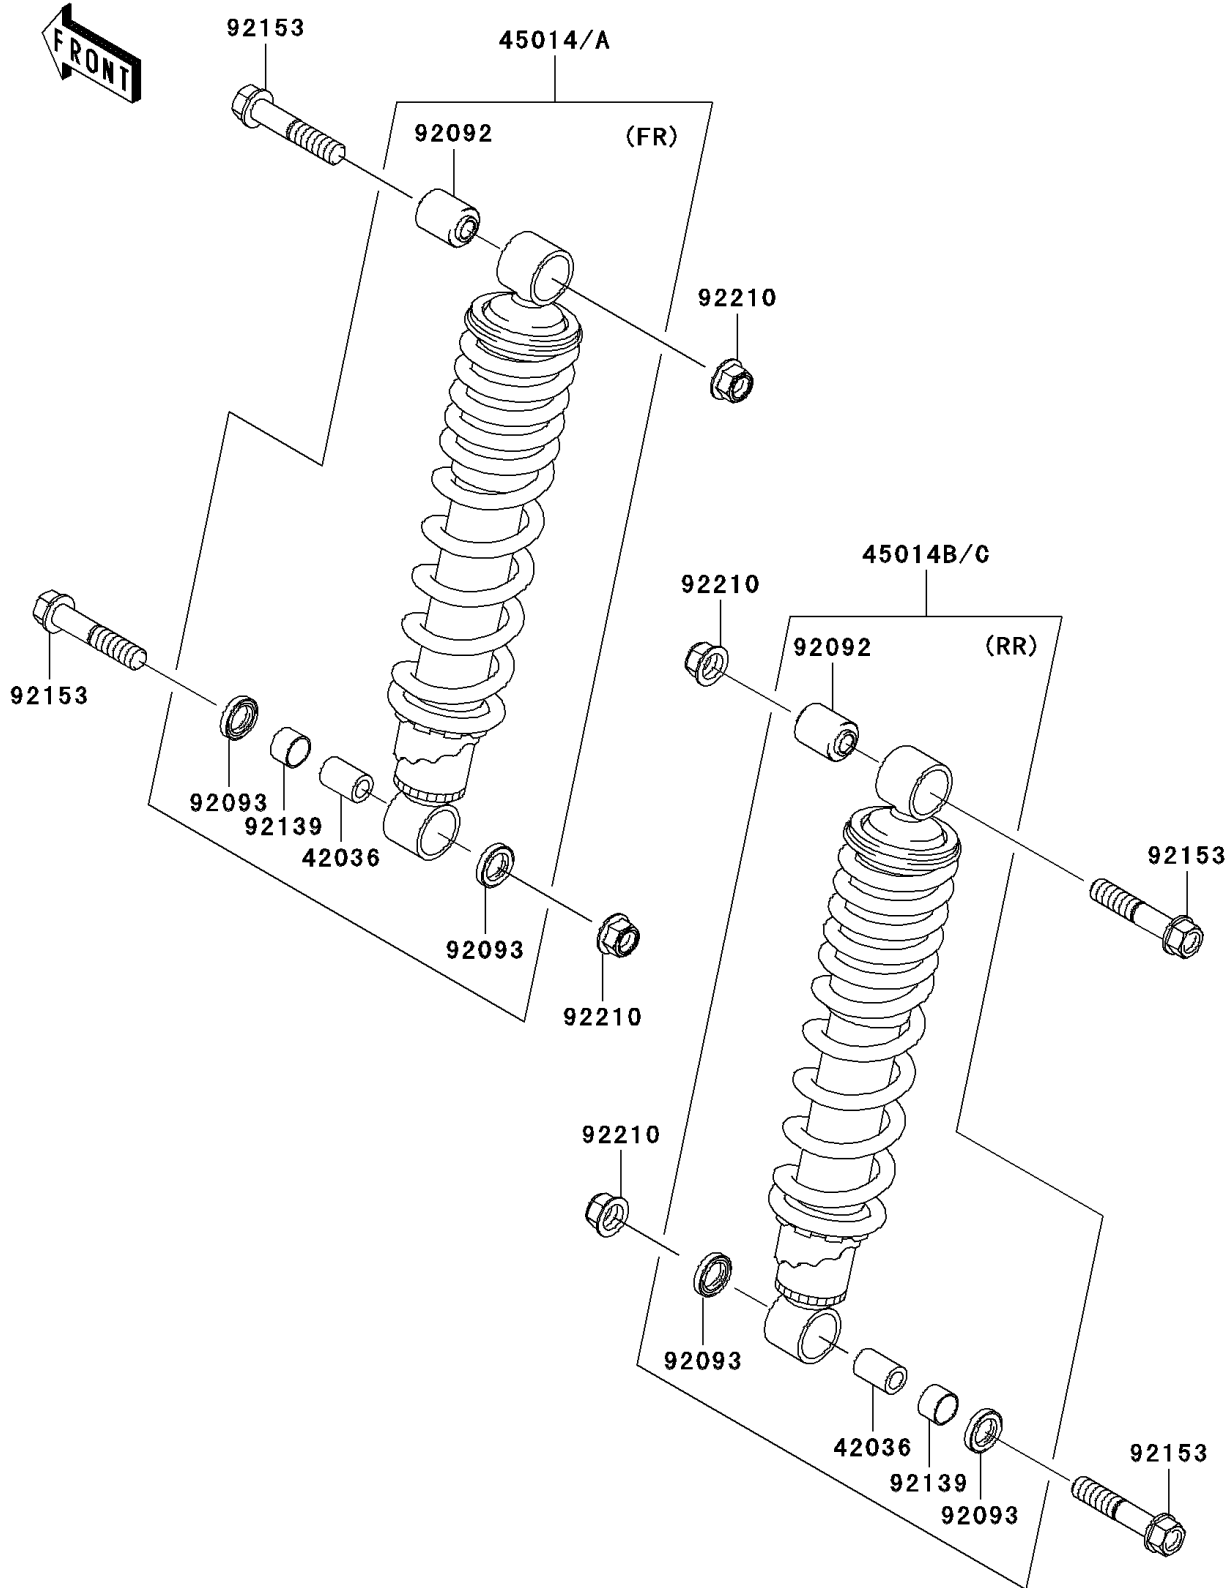

2010 Brute Force 750 4x4i Realtree APG HD PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR,BLACK (Ref # 45014A)	45014-0203-17D	2
SHOCKABSORBER,RR,BLACK (Ref # 45014C)	45014-0204-17D	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8