


2020 Z900RS ABS PARTS DIAGRAM

Front Fender(s)

F2171

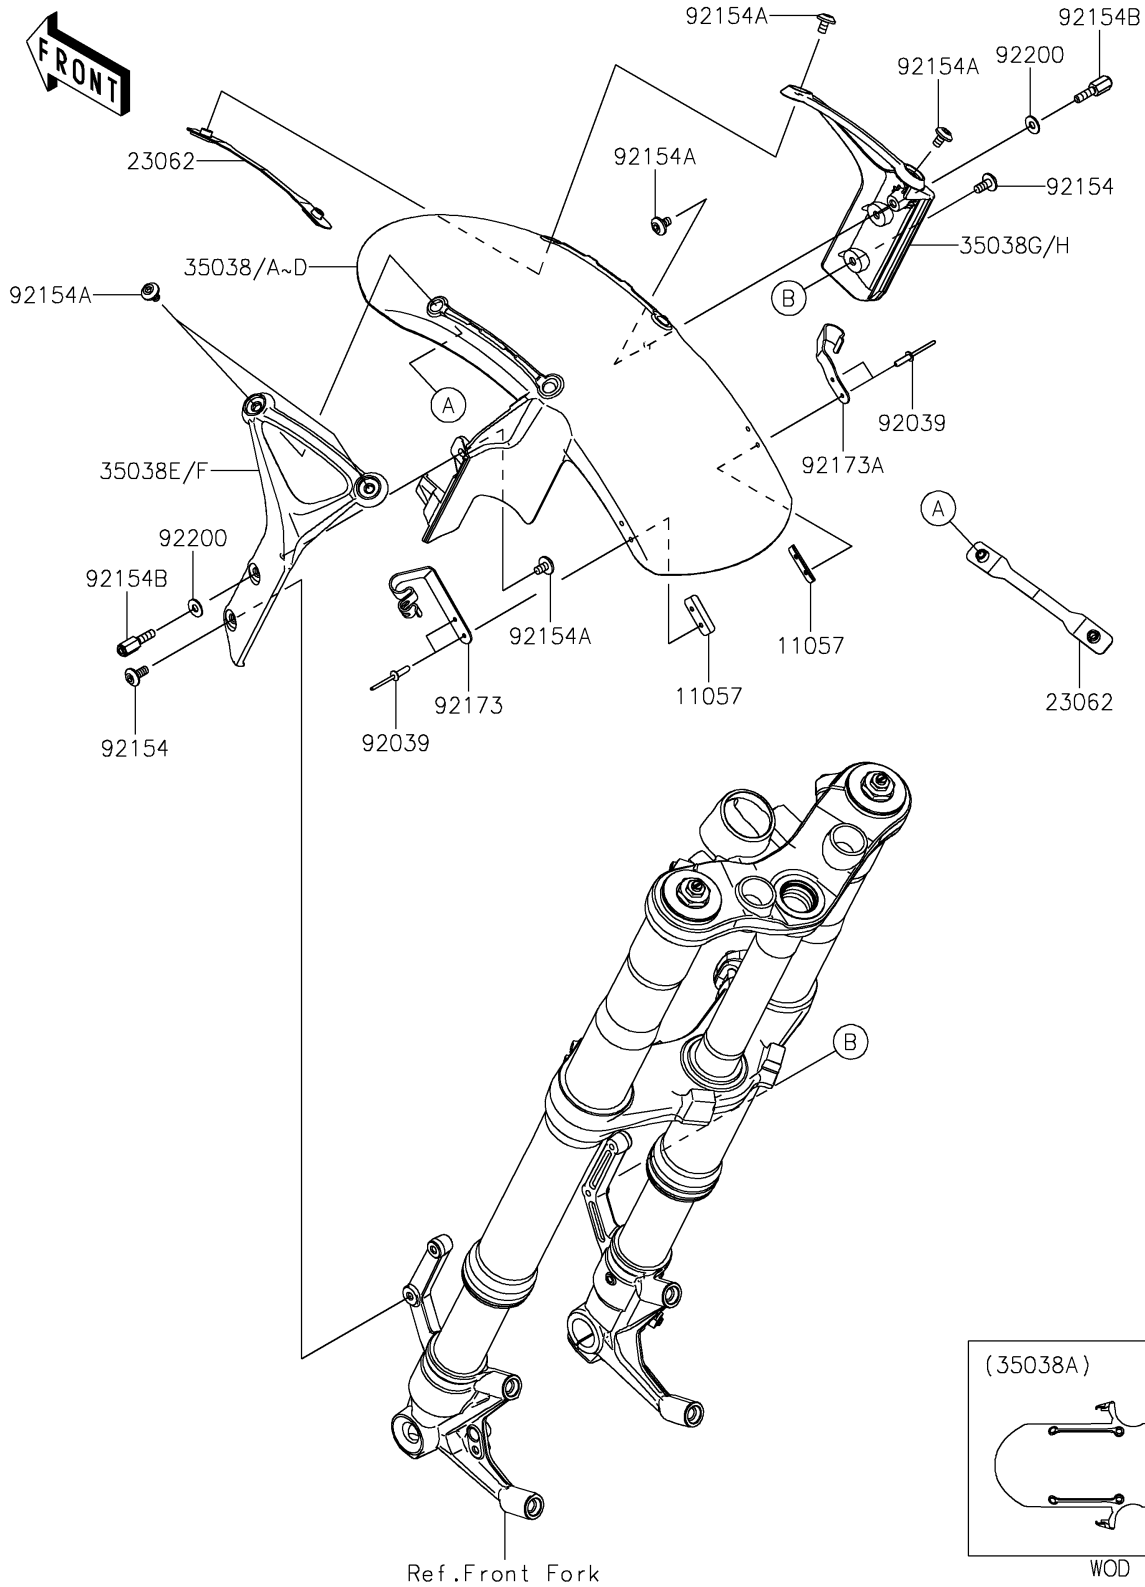

2020 Z900RS ABS PARTS LIST

Front Fender(s)

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11057)	11057-1565	2
BRACKET-COMP (Ref # 23062)	23062-0979	2
FENDER-FRONT,C.GREEN (Ref # 35038C)	35038-0002-65G	1
FENDER-FRONT,ARM,LH,B.B.SILVER (Ref # 35038F)	35038-0003-60N	1
FENDER-FRONT,ARM,RH,B.B.SILVER (Ref # 35038H)	35038-0004-60N	1
RIVET,3.2X9.5 (Ref # 92039)	92039-0752	4
BOLT,SOCKET,6X14 (Ref # 92154)	92154-1735	2
BOLT,SOCKET,6X10 (Ref # 92154A)	92154-1834	6
BOLT,CONNECTOR (Ref # 92154B)	92154-3734	2
CLAMP,LH (Ref # 92173)	92173-1739	1
CLAMP,RH (Ref # 92173A)	92173-1740	1
WASHER,6.2X15X1.2 (Ref # 92200)	92200-1762	2