


# 2006 Vulcan 1600 Nomad PARTS DIAGRAM

Suspension/Shock Absorber

F2151

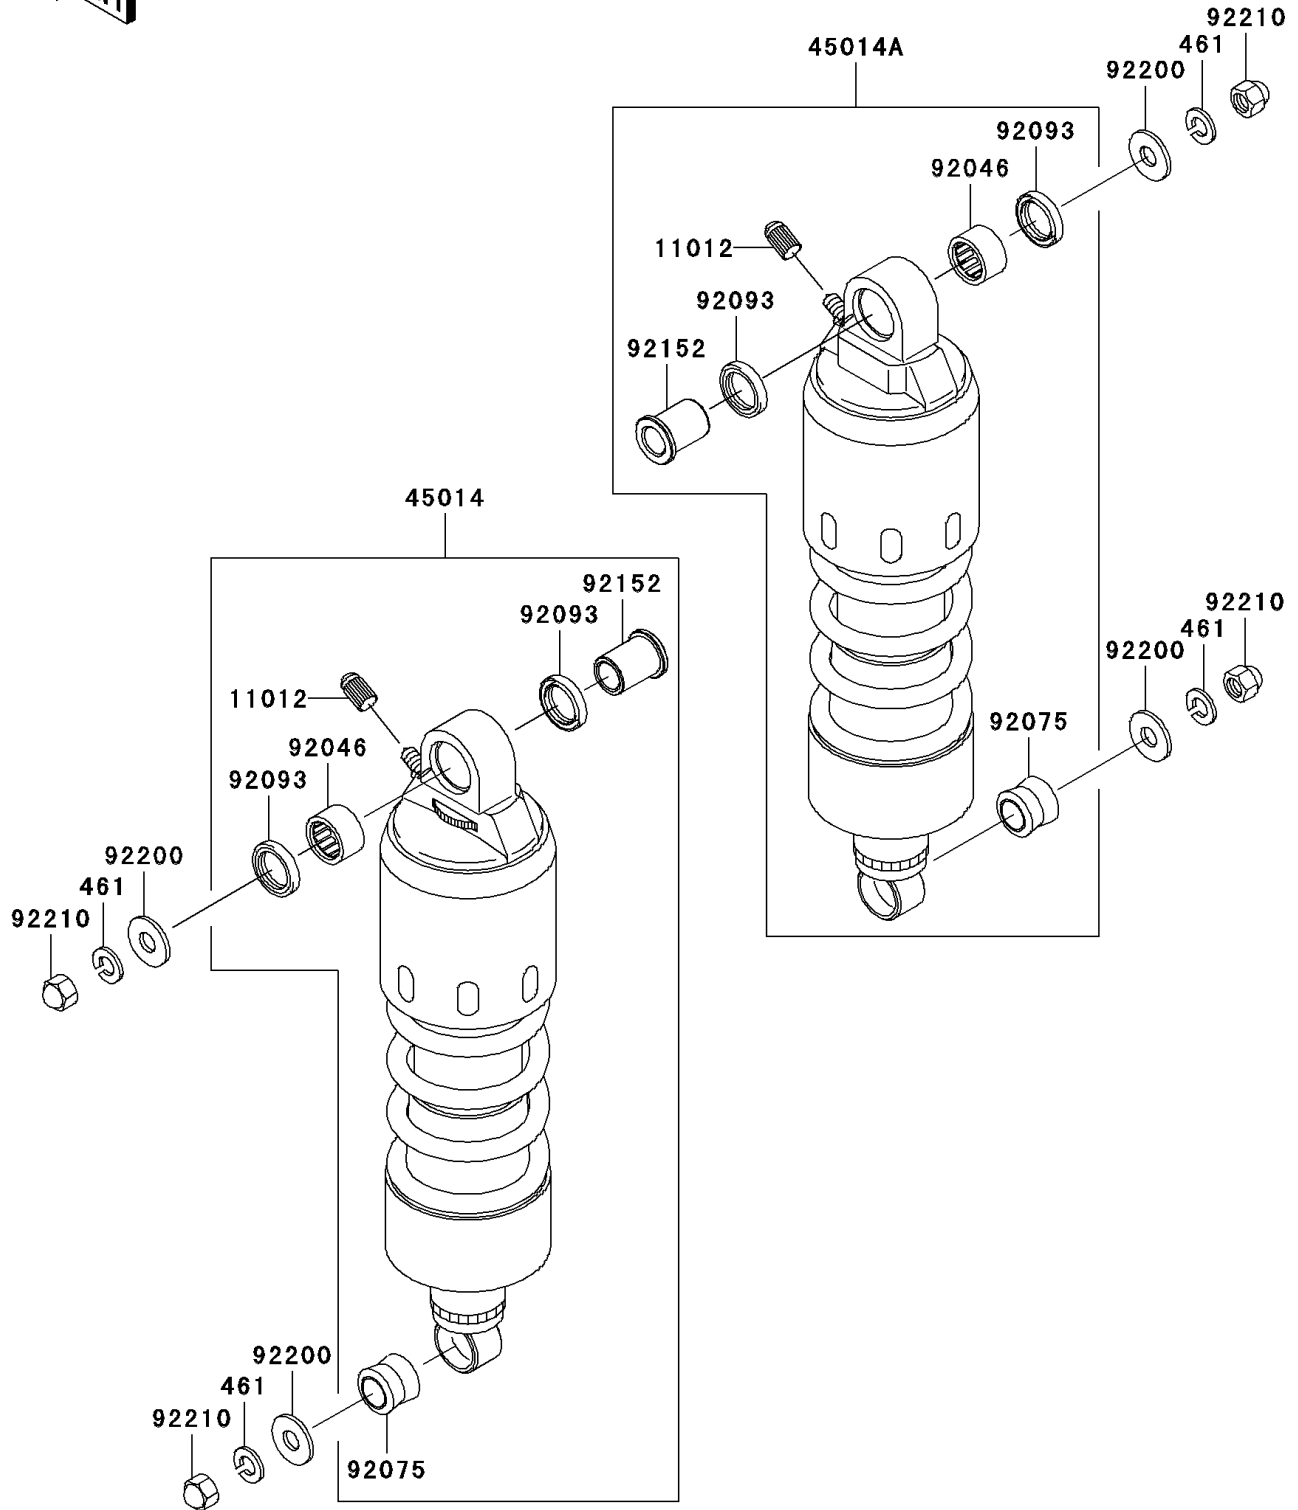

## 2006 Vulcan 1600 Nomad PARTS LIST

### Suspension/Shock Absorber

ITEM NAME	PART NUMBER	QUANTITY
WASHER-SPRING,10MM (Ref # 461)	461S1000	4
CAP (Ref # 11012)	11012-1283	2
SHOCKABSORBER,LH (Ref # 45014)	45014-0108	1
SHOCKABSORBER,RH (Ref # 45014A)	45014-0109	1
BEARING-NEEDLE (Ref # 92046)	92046-1296	2
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1387	2
SEAL (Ref # 92093)	92093-1552	4
COLLAR (Ref # 92152)	92152-1336	2
WASHER,10.5X26X2.5 (Ref # 92200)	92200-1565	4
NUT,CAP,10MM (Ref # 92210)	92210-1288	4