


2006 Vulcan 1600 Nomad PARTS DIAGRAM

Footrests

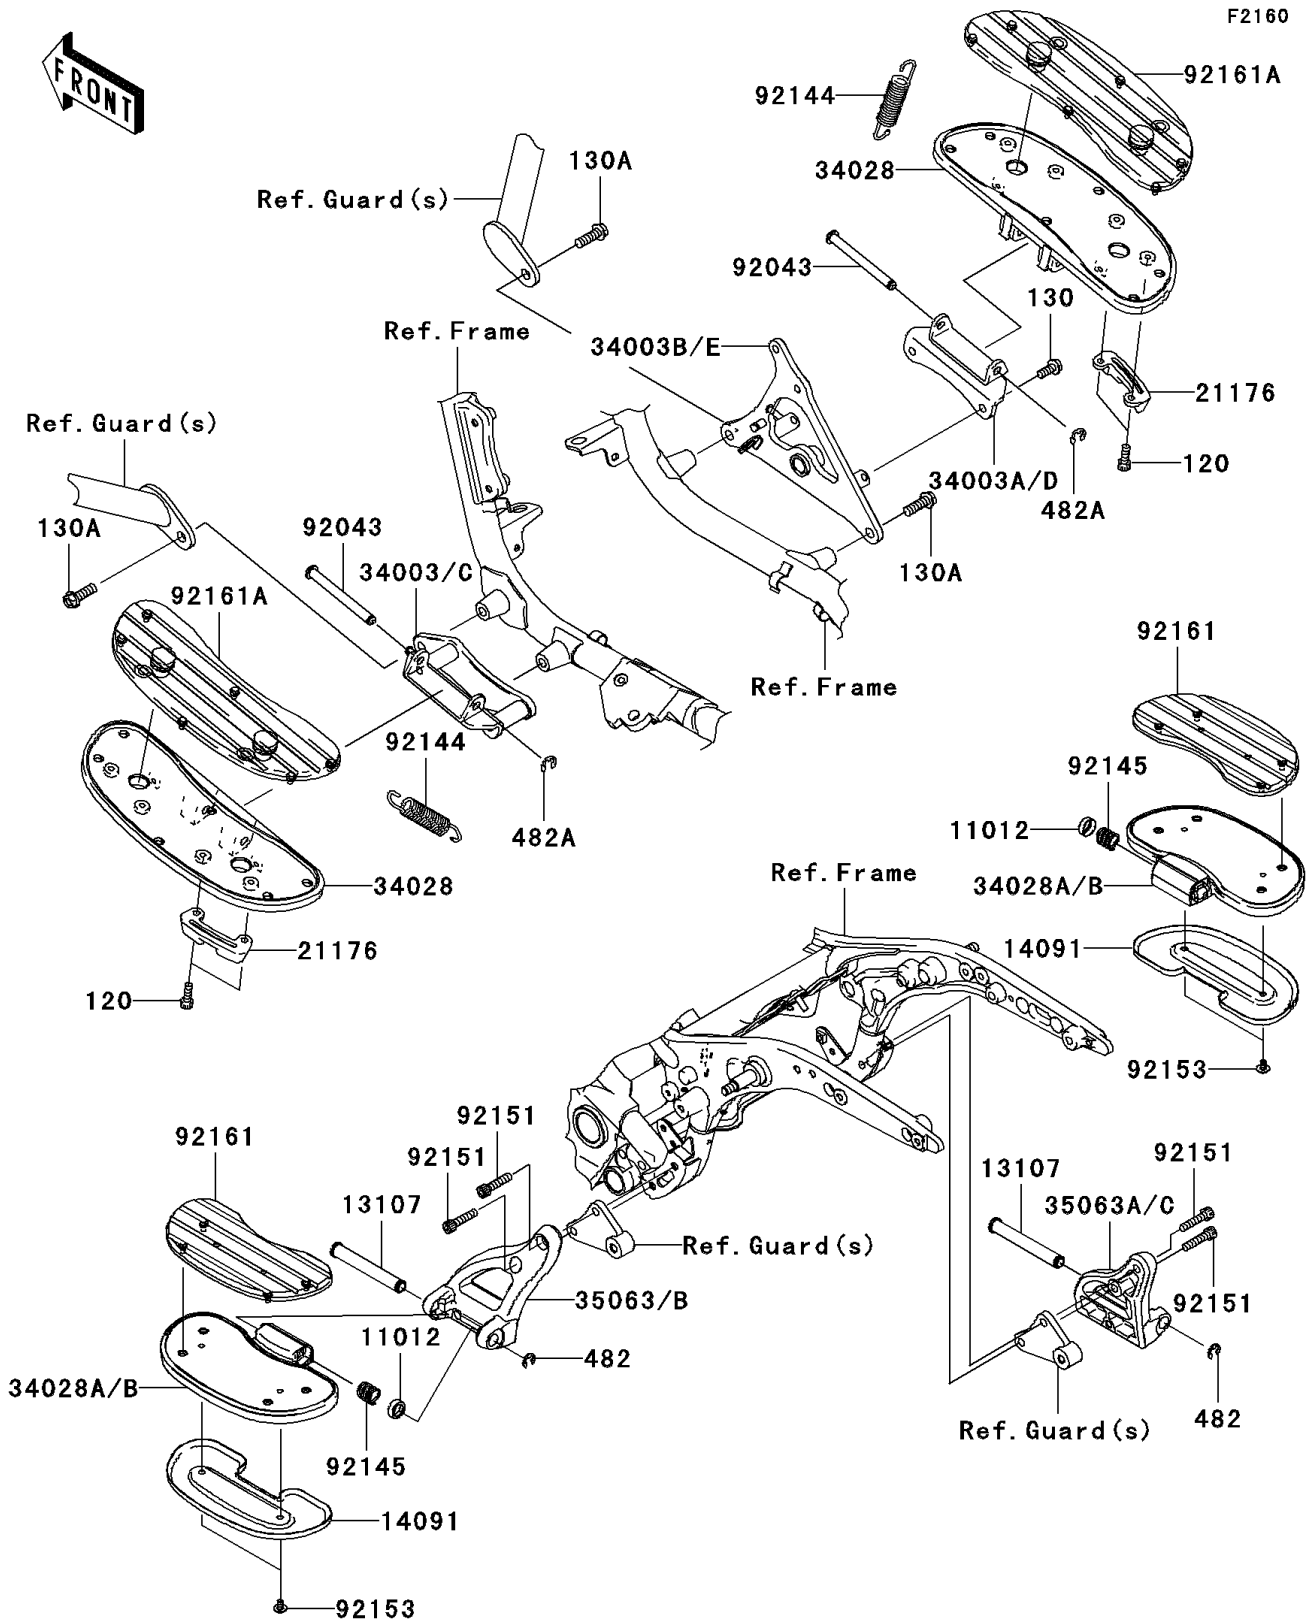

2006 Vulcan 1600 Nomad PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,6X16 (Ref # 120)	120S0616	4
BOLT-FLANGED,8X20 (Ref # 130)	130J0820	2
BOLT-FLANGED,10X30 (Ref # 130A)	130J1030	4
CIRCLIP-TYPE-E (Ref # 482)	482L0200	2
CIRCLIP-TYPE-E,8MM (Ref # 482A)	482L8000	2
CAP (Ref # 11012)	11012-1498	2
SHAFT,REAR STEP (Ref # 13107)	13107-0087	2
COVER,REAR STEP (Ref # 14091)	14091-0229	2
SENSOR,BANK (Ref # 21176)	21176-0021	2
HOLDER-STEP,FR,LH (Ref # 34003)	34003-0012	1
HOLDER-STEP,FR,RH (Ref # 34003A)	34003-0013	1
HOLDER-STEP,FR,RH (Ref # 34003B)	34003-0014	1
STEP,FR (Ref # 34028)	34028-0011	2
STEP,RR (Ref # 34028A)	34028-0028	2
STAY,REAR STEP,LH (Ref # 35063)	35063-0149	1
STAY,REAR STEP,RH (Ref # 35063A)	35063-0150	1
PIN,10X98.5 (Ref # 92043)	92043-1707	2
SPRING (Ref # 92144)	92144-1266	2
SPRING,REAR STEP (Ref # 92145)	92145-1130	2
BOLT,SOCKET,8X35 (Ref # 92151)	92151-1535	4
BOLT,SOCKET,6X10 (Ref # 92153)	92153-1096	4
DAMPER,REAR STEP (Ref # 92161)	92161-0145	2
DAMPER,FRONT STEP (Ref # 92161A)	92161-1325	2